



通用型围栏安装说明

■ FENCE INSTALLATION



目录 CATALOGS

注意事项&工具 Notice & Toolings	P01
通用围栏安装说明 Fence installation	P02
零部件 Components & Parts	P02
标准高度安全围栏 Standard height safety fence	P03
安装步骤 Installation steps	P03
非标高度安全围栏 Non-standard height safety fence	P05
直角安全围栏 Linear safety fence	P06
拼接围网安全围栏 Splicing safety fence	P06
通用铰链门安装说明 Hinged door installation	P07
零部件 Components & Parts	P07
位置视图 Position view	P09
爆炸视图 Exploded view	P09
安装步骤 Installation steps	P10
通用悬浮门安装说明 Suspended door installation	P13
零部件 Components & Parts	P13
位置视图 Position view	P14
爆炸视图 Exploded view	P15
安装步骤 Installation steps	P16
通用滑动门安装说明 Sliding door installation	P21
位置视图 Position view	P21
零部件 Components & Parts	P22
安装步骤 Installation steps	P23

注意事项

- 1、请优先安装安全门，其次安装安全围栏；
- 2、安装立柱时先将按照布局图纸位置划线放样；
- 3、根据立柱地脚孔位，用10mm的冲击钻头打80~90mm深的孔（按JB/ZQ4763-2006标准执行）；
- 4、使用工具锤敲击膨胀螺栓使其固定于地面；
- 5、安装并校正立柱后使用螺母拧紧；
- 6、最后安装防尘盖即可。

NOTICE

1. Install the safety door before install the panels and columns.
2. The column installation according to the layout and lines on the ground.
3. Use the 10mm impact drill to drill 80~90mm deep holes according to the column anchor position.(According to JB/ZQ4763-2006 effective standard.)
- 4, Fasten the expansion bolts to the floor.
5. Fasten the bolts after leveling the column.
6. Cover the foot dust cover.

工具 TOOLINGS



零部件 COMPONENTS & PARTS



立柱
Column

围网
Panel

具体立柱/围网规格数量以发货清单中为准
Detail qty of panels and columns refer to the delivery packing list.



上卡环
Upper snap ring




下卡环
Lower snap ring




防尘盖
Foot dust cover



60*60立柱堵头
60*60 Column plug

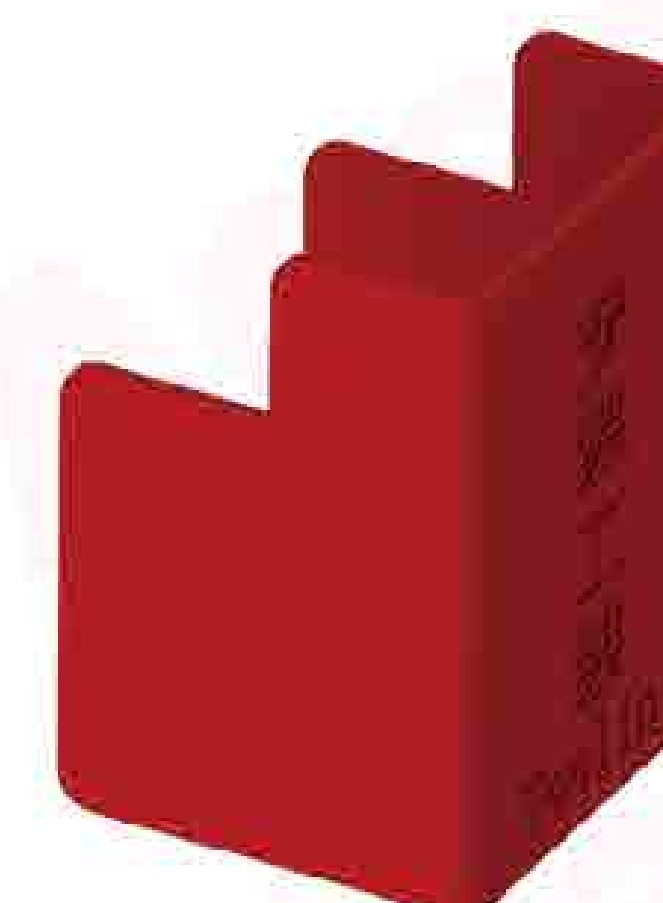


安装工装
Tooling

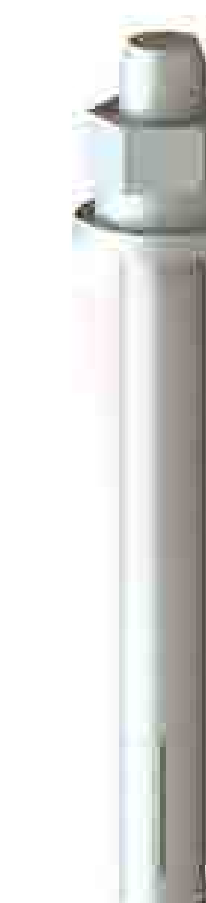

膨胀螺栓
Expansion bolt

具体安装附件物料以发货清单数量为准
Detail qty of attachment refer to the delivery packing list.

标准高度安全围栏 STANDARD HEIGHT SAFETY FENCE

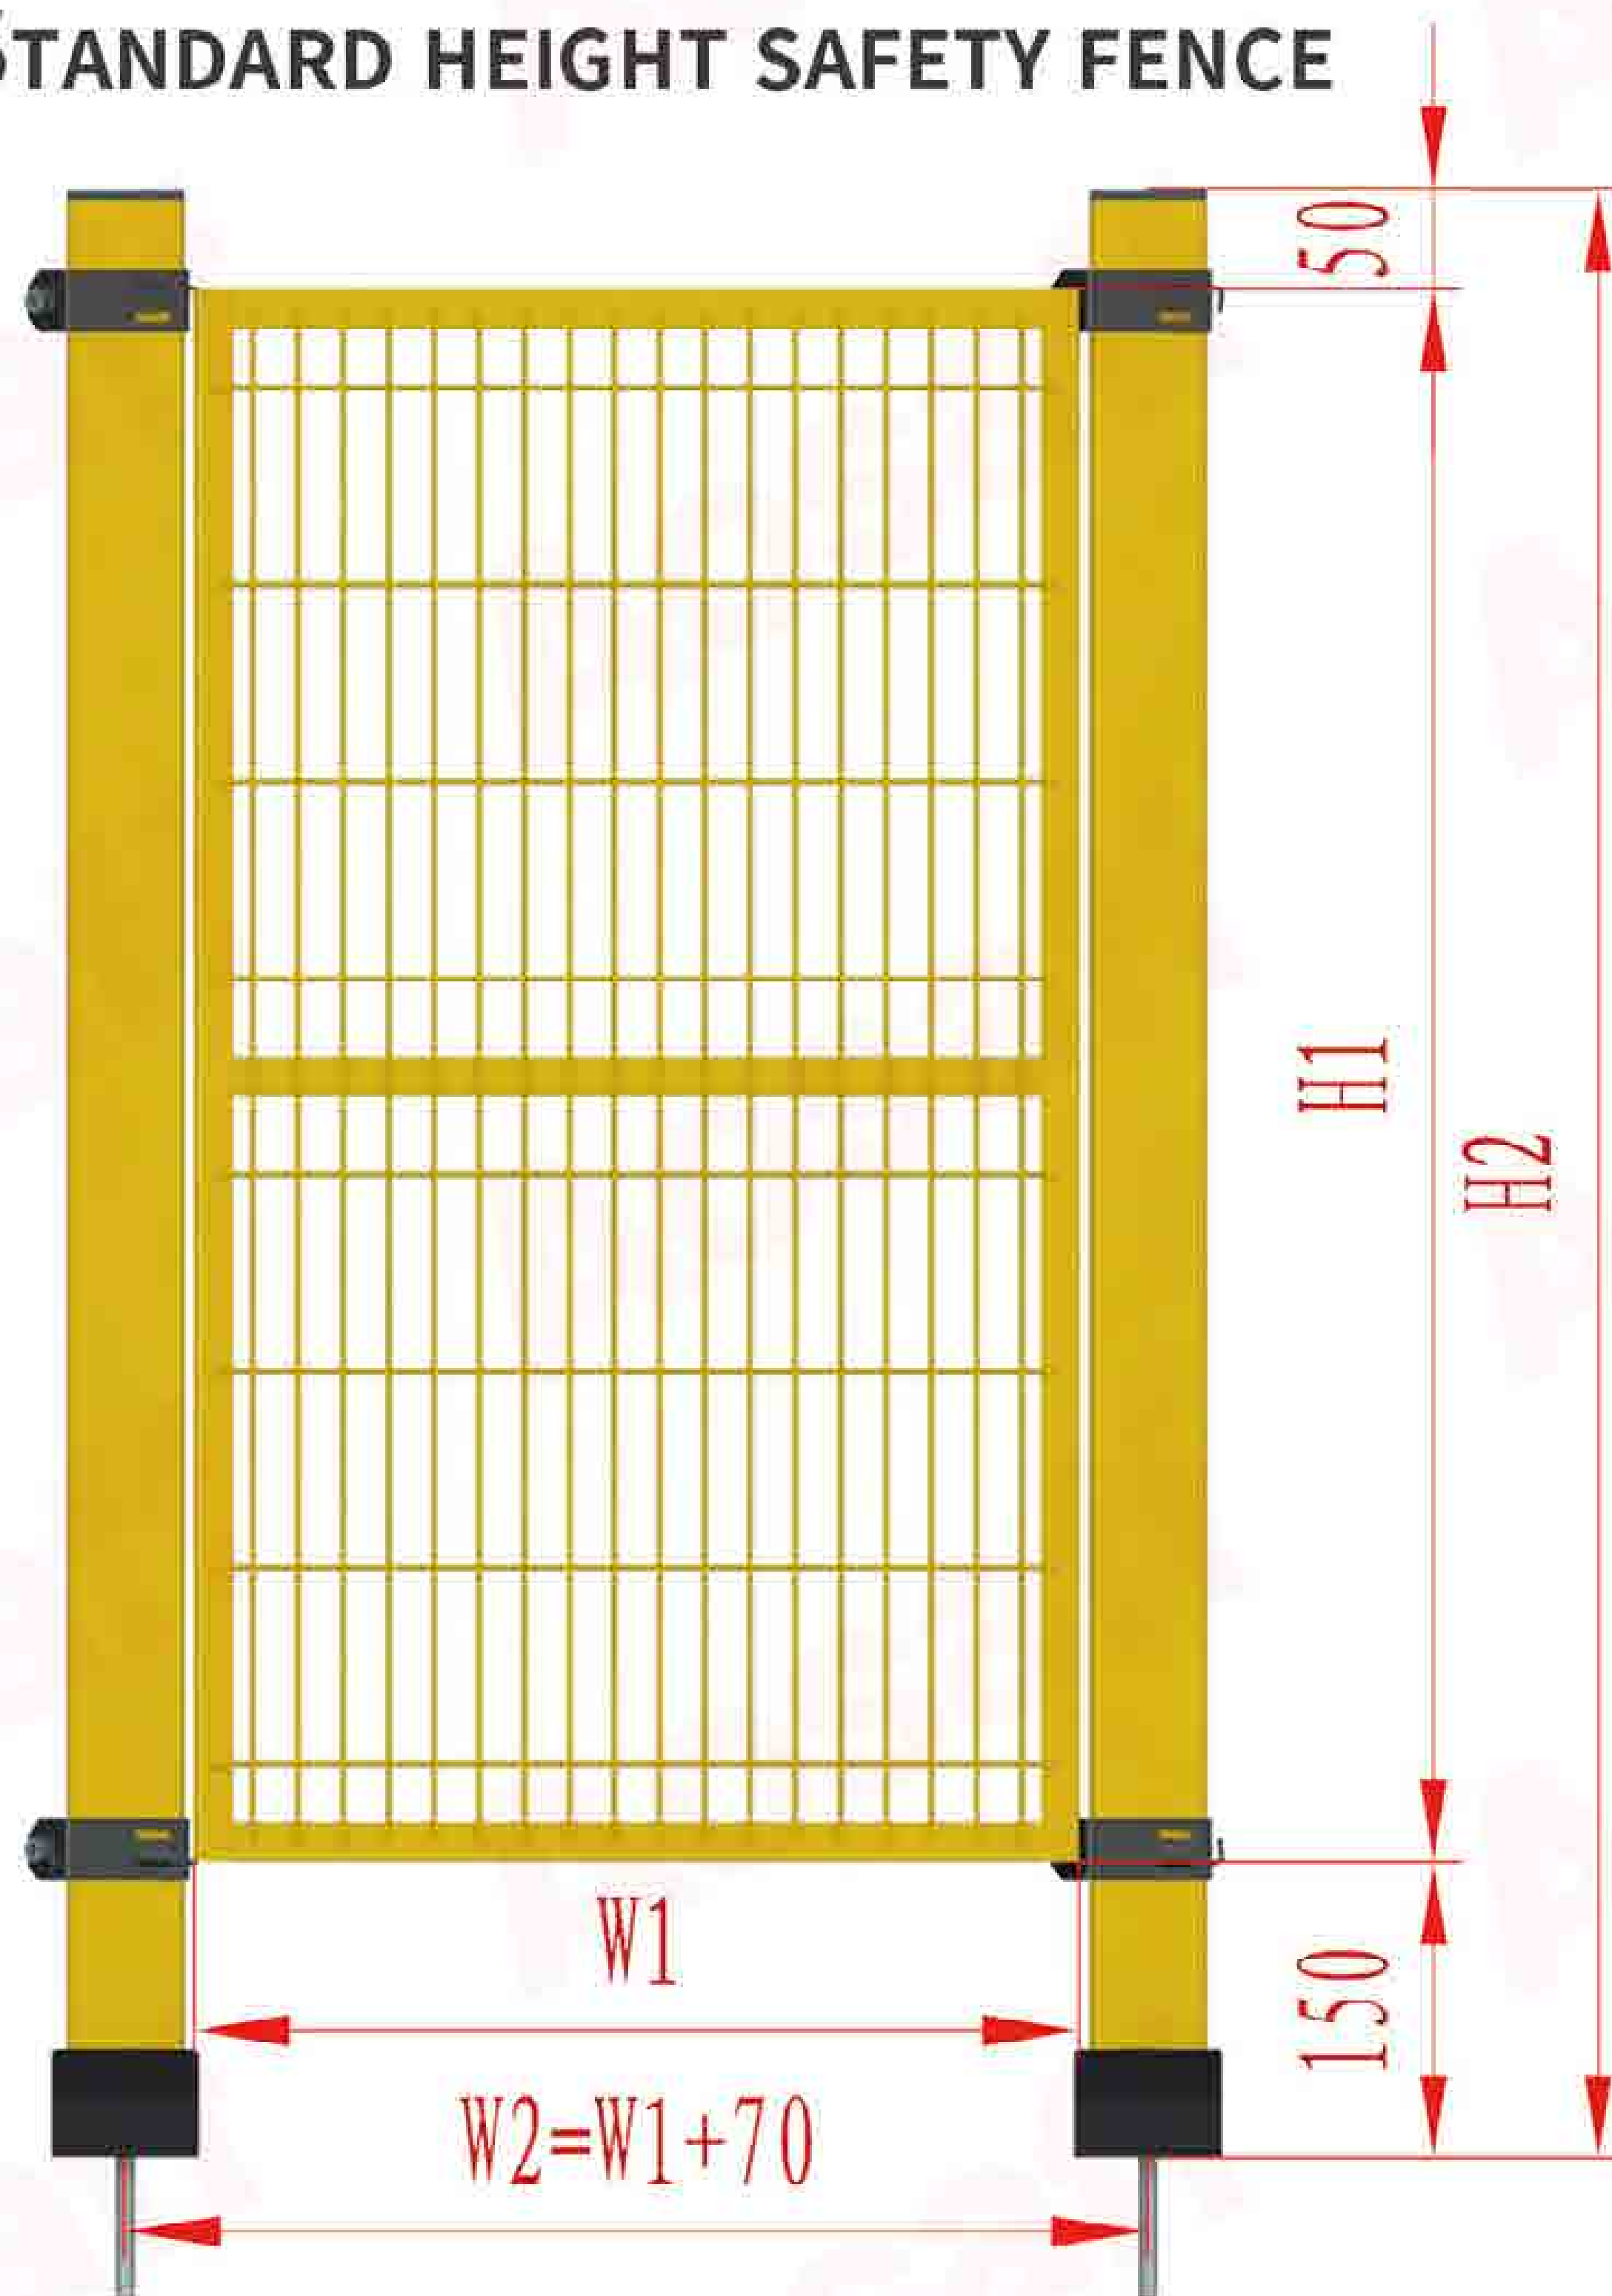

$W1$ =围网宽度(Panel width) $W2$ =立柱中心距(Column center distance)
 $H1$ =围网高度(Panel height) $H2$ =立柱高度(Column height)
 150=围网离地安装距离(Distance from the panel to the floor)
 50=围网顶端安装距离(Distance from the panel to the top of column)



安装步骤 INSTALLATION STEPS



①



非标高度安全围栏 NON-STANDARD HEIGHT SAFETY FENCE

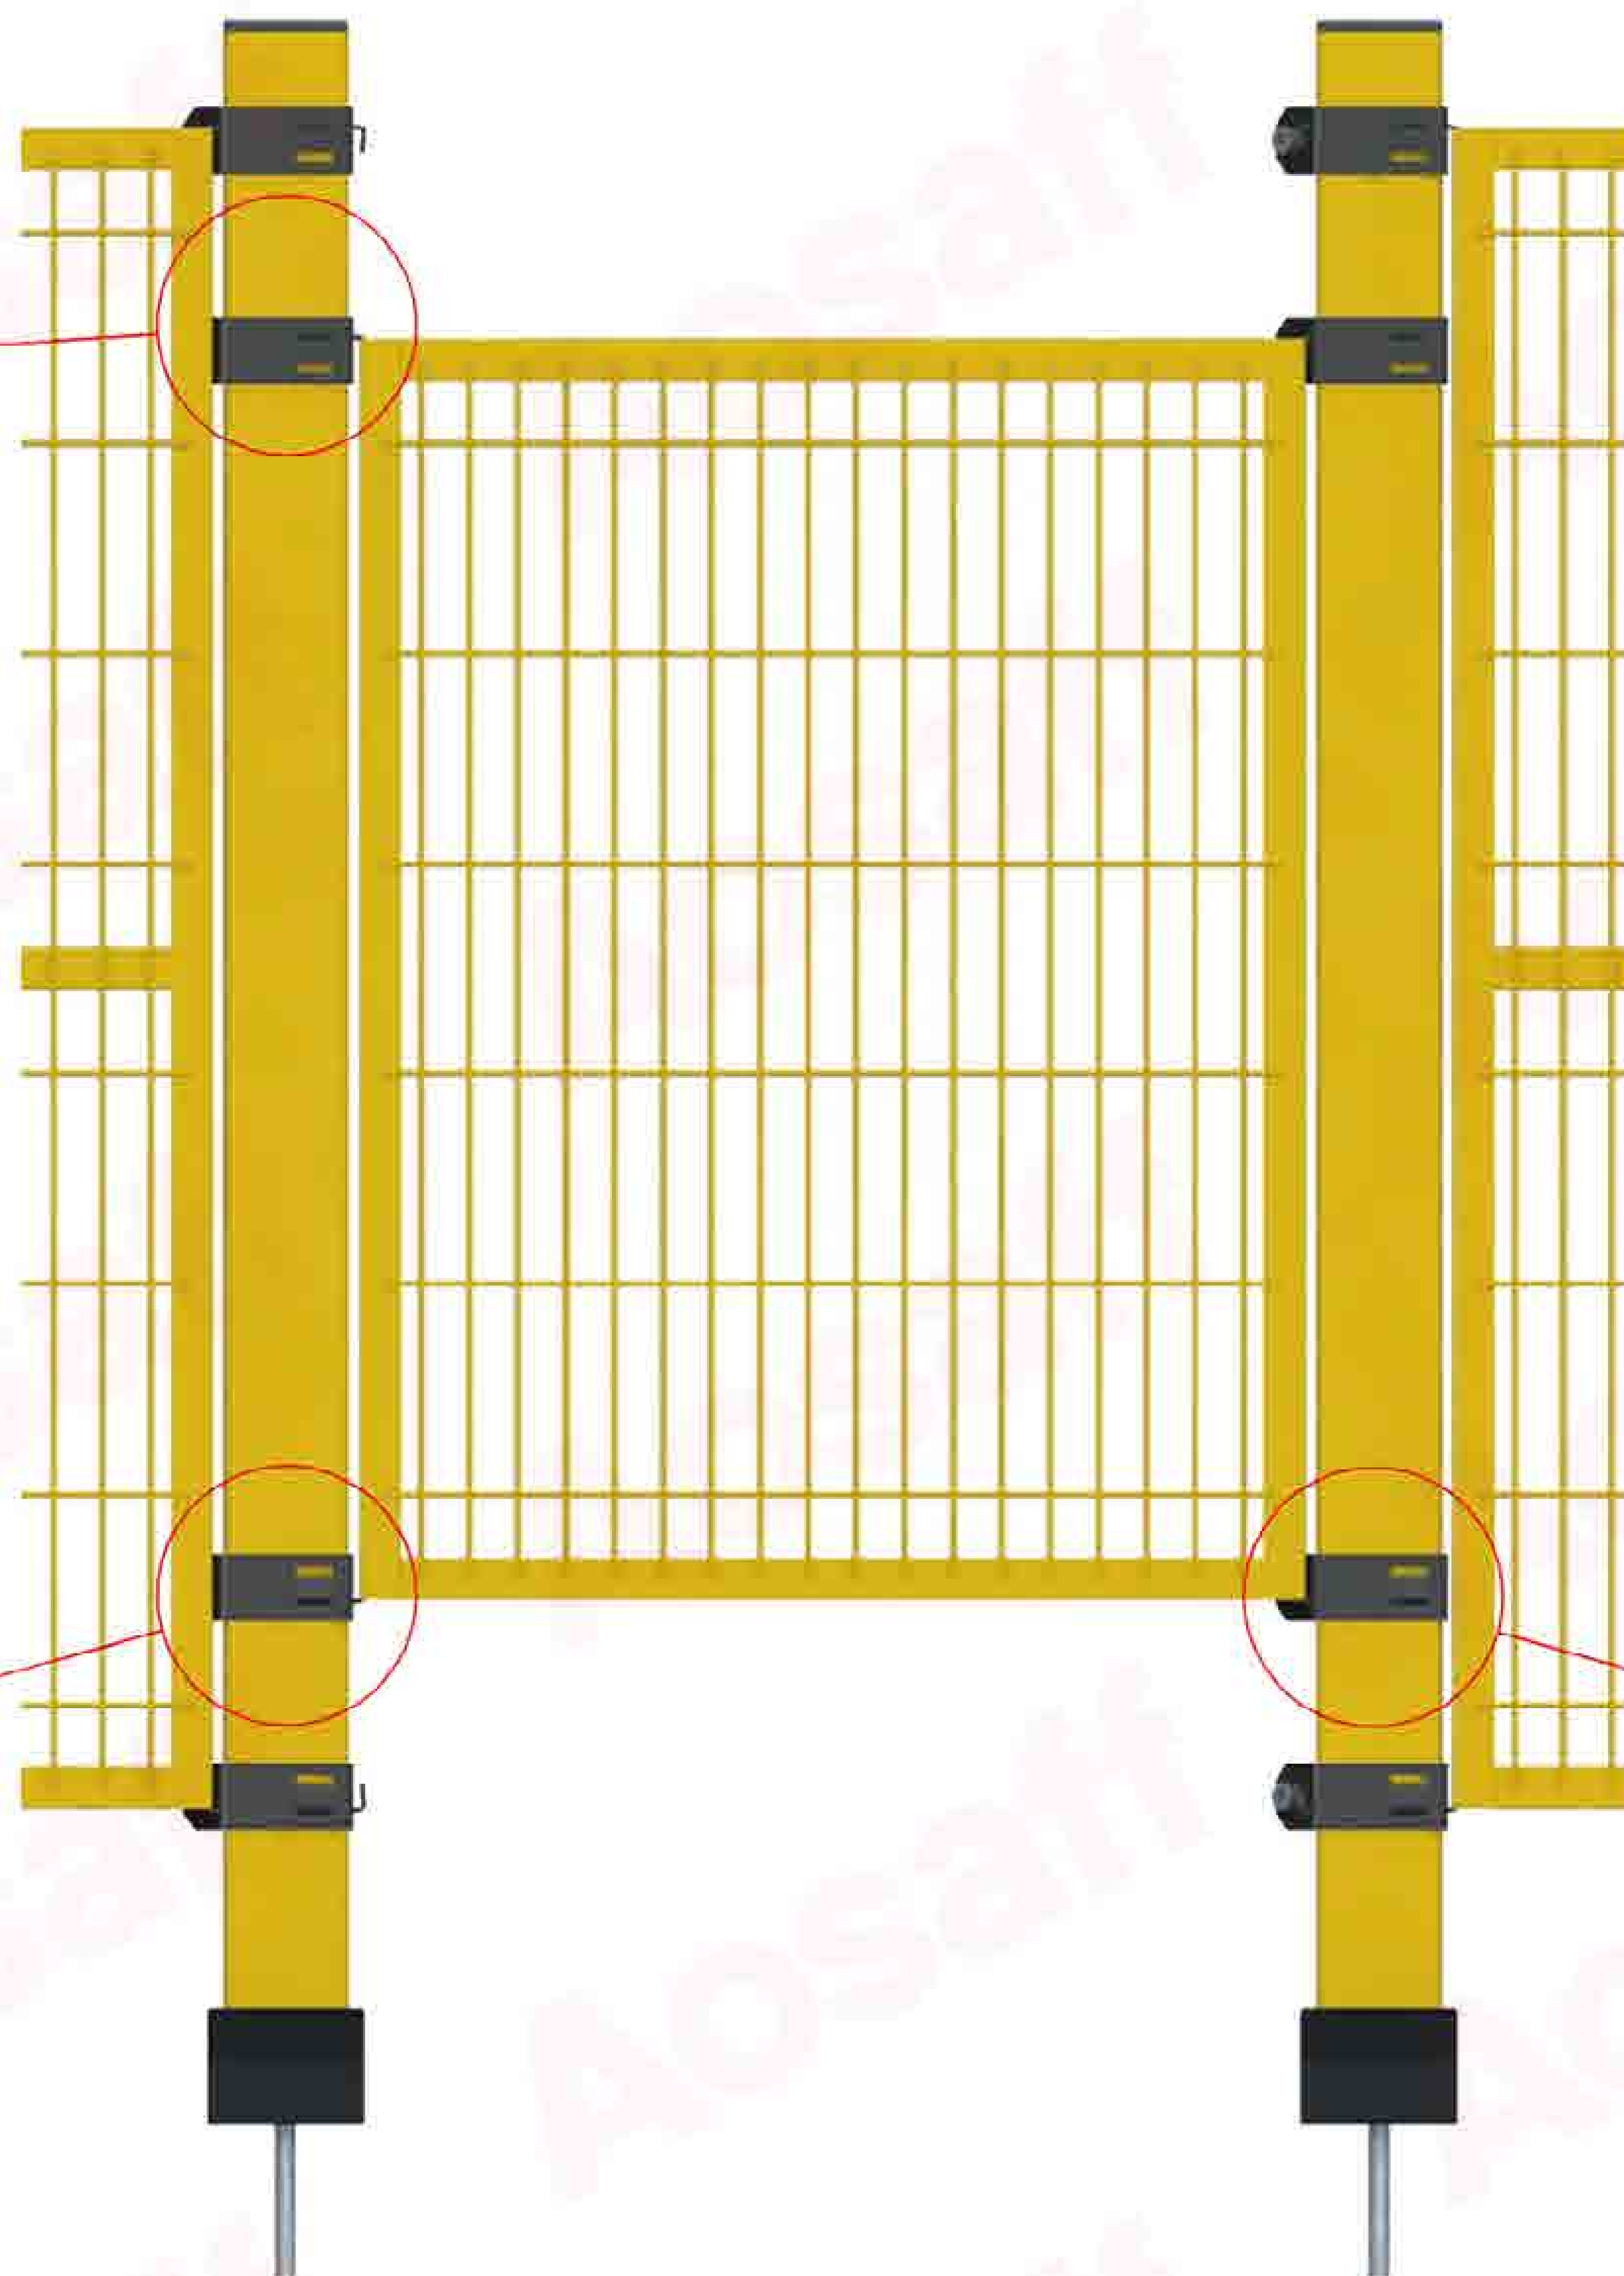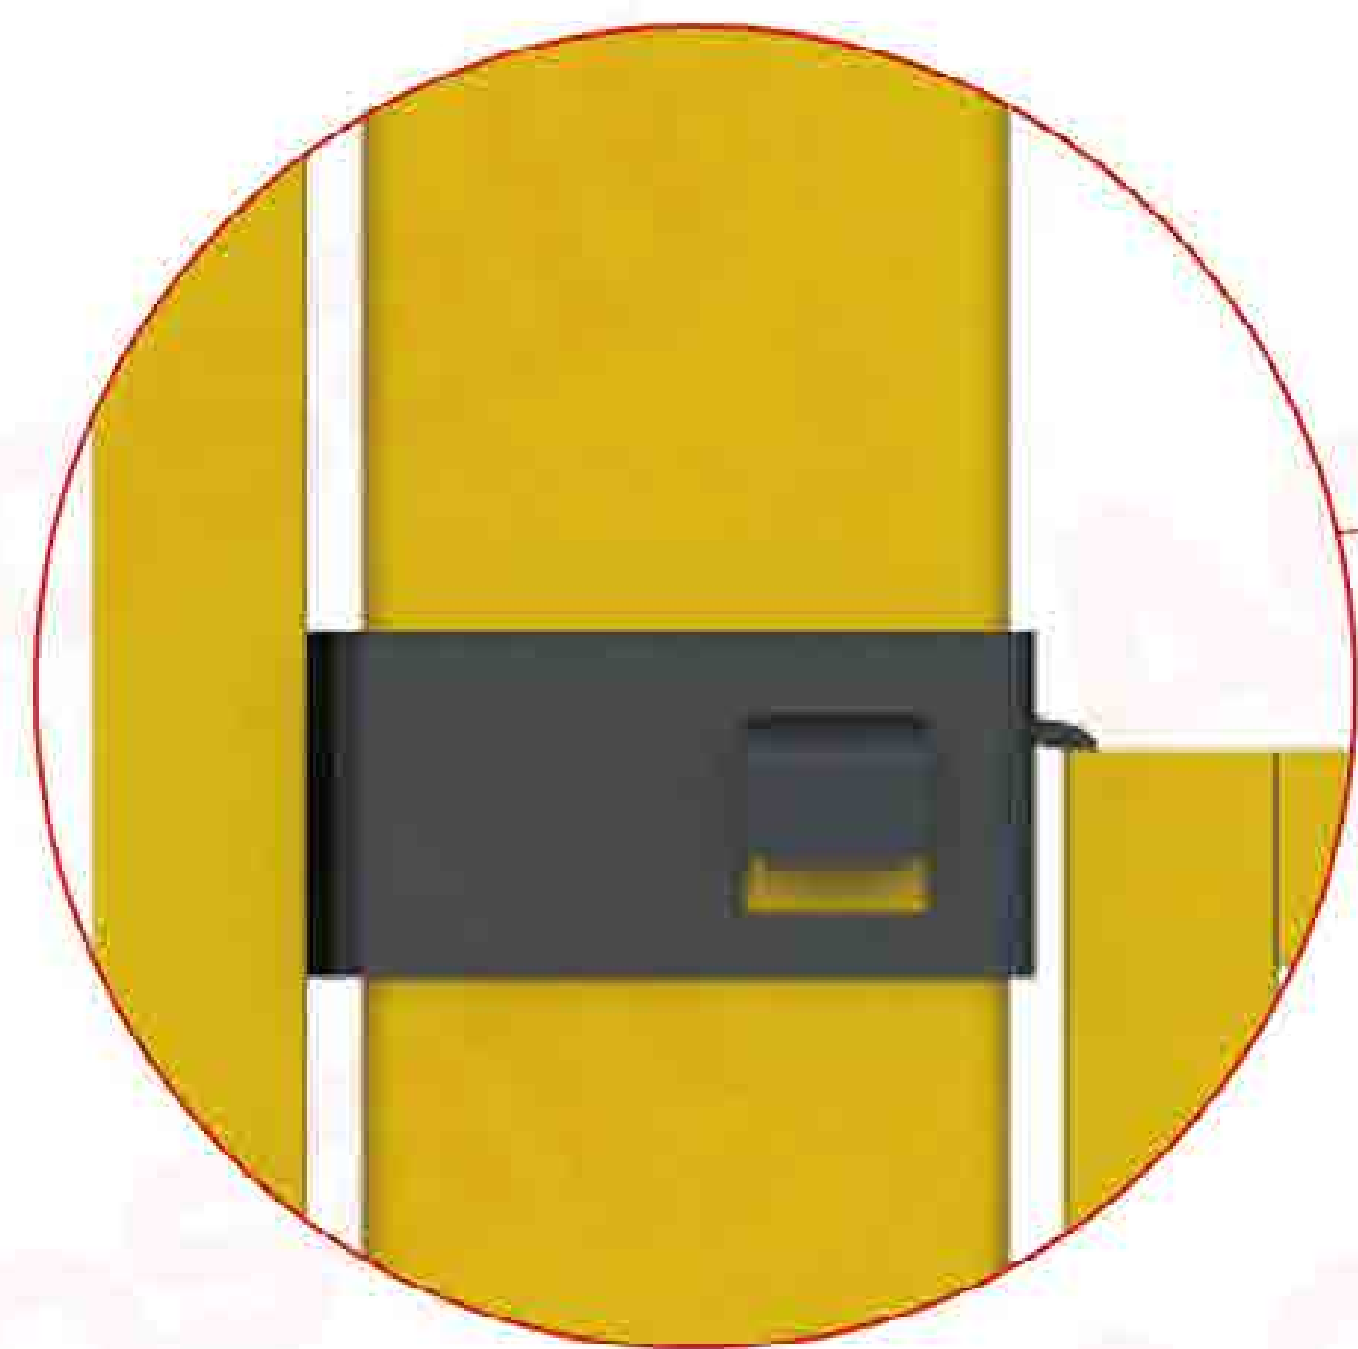

干涉耳朵现场切除
Interfering ears removed on site



直角安全围栏 LINEAR SAFETY FENCE



根据需求旋转卡环安装
Rotate snap ring as required

拼接围网安全围栏 SPLICING SAFETY FENCE



围网卡件
Fixed clamping

U型槽
U-shaped groove

高度 $\geq 1400\text{mm}$ 围网使用围网卡件辅助固定
Height above 1400mm, using the fixed clamping to fix

通用型铰链门 安装说明

Hinged
Door
Installation



零部件 COMPONENTS & PARTS





门用卡环套件×1
Door clamps




横梁固定角码×2
Door beam connector



横梁堵头 Beam plug ×2



专用铰链 Hinge setting ×3

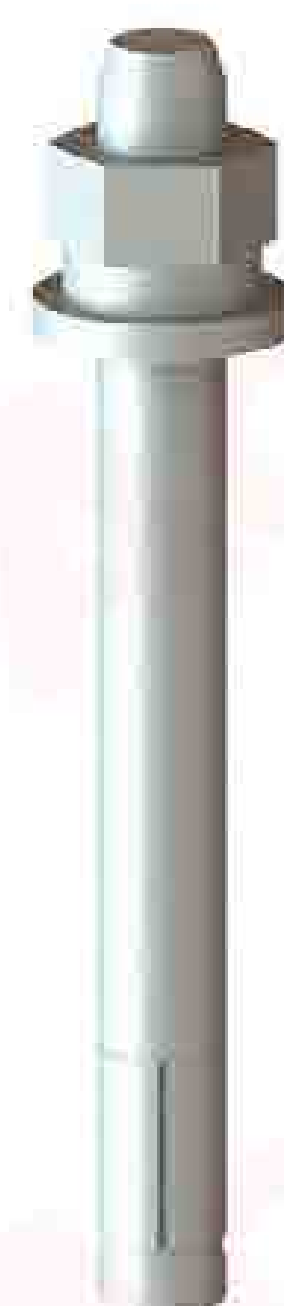

膨胀螺栓×4
Expansion bolt




把手组件×1
Handle setting



万向脚轮×1
Caster wheel

位置视图 POSITION VIEW

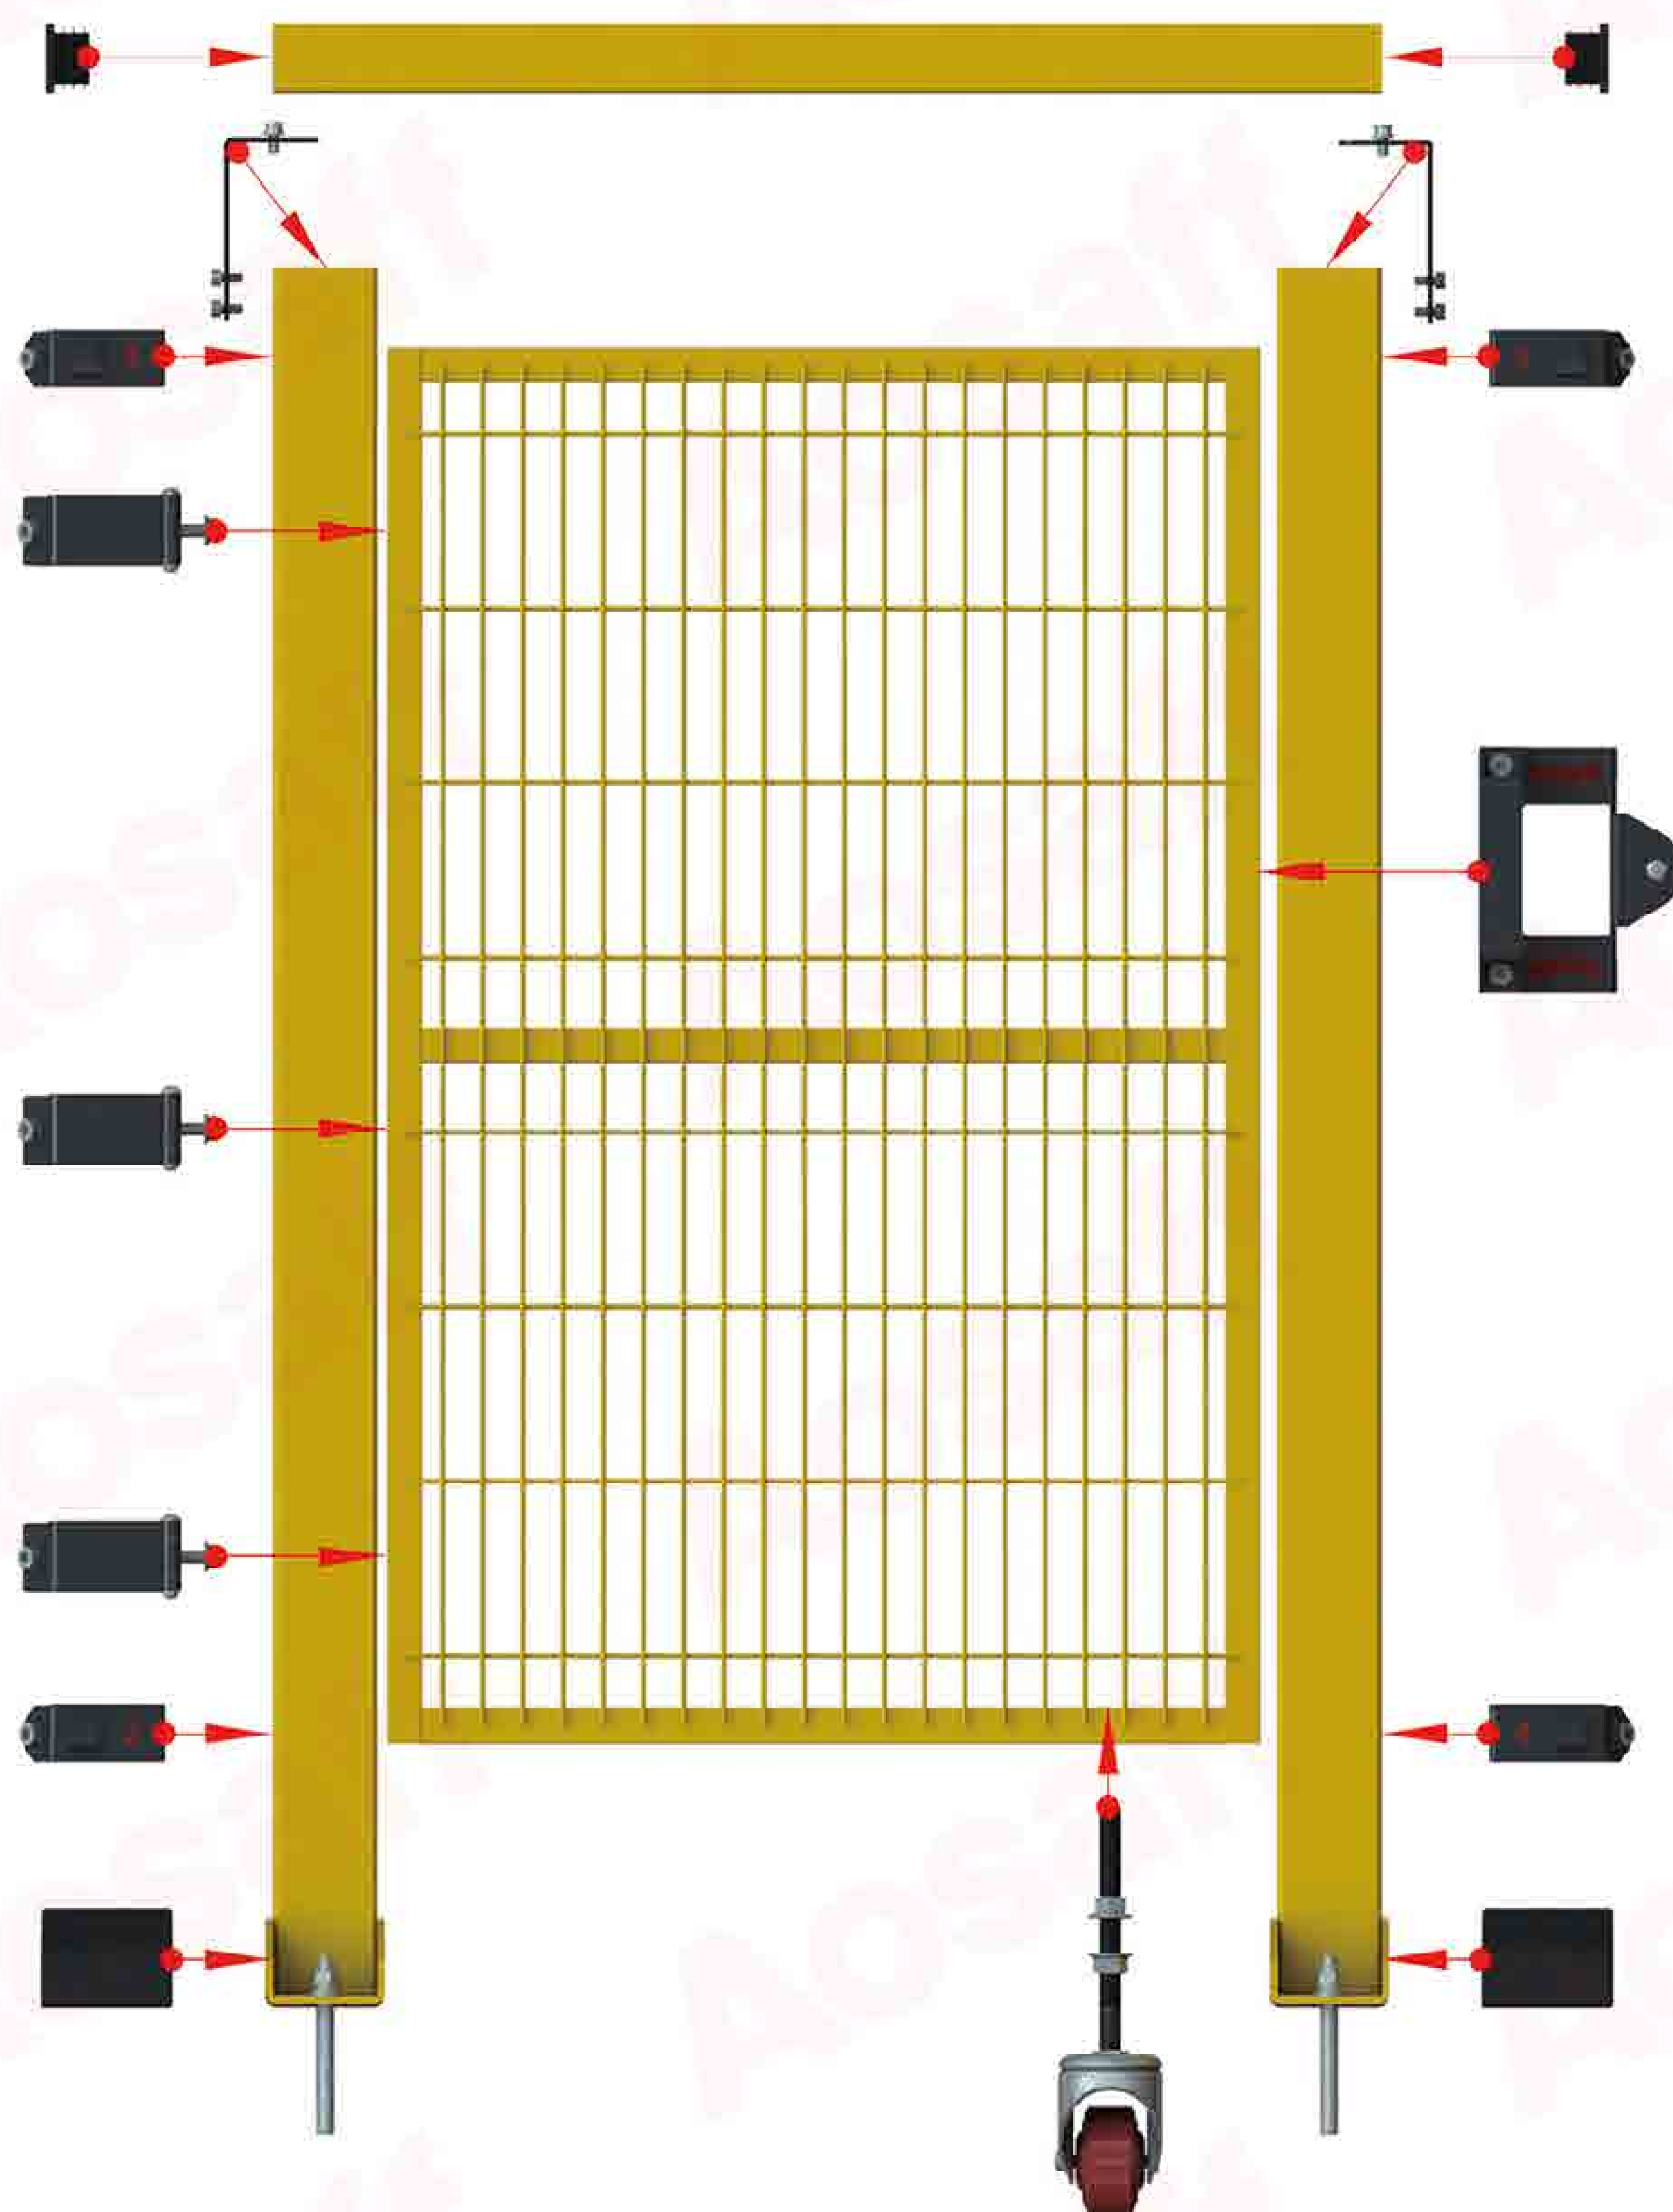

爆炸视图 EXPLODED VIEW



安装步骤 INSTALLATION STEPS





⑥

⑦

⑧



⑨



⑩



⑪


通用型悬浮门 安装说明 Suspended Door Installation




零部件 COMPONENTS & PARTS




位置视图 POSITION VIEW

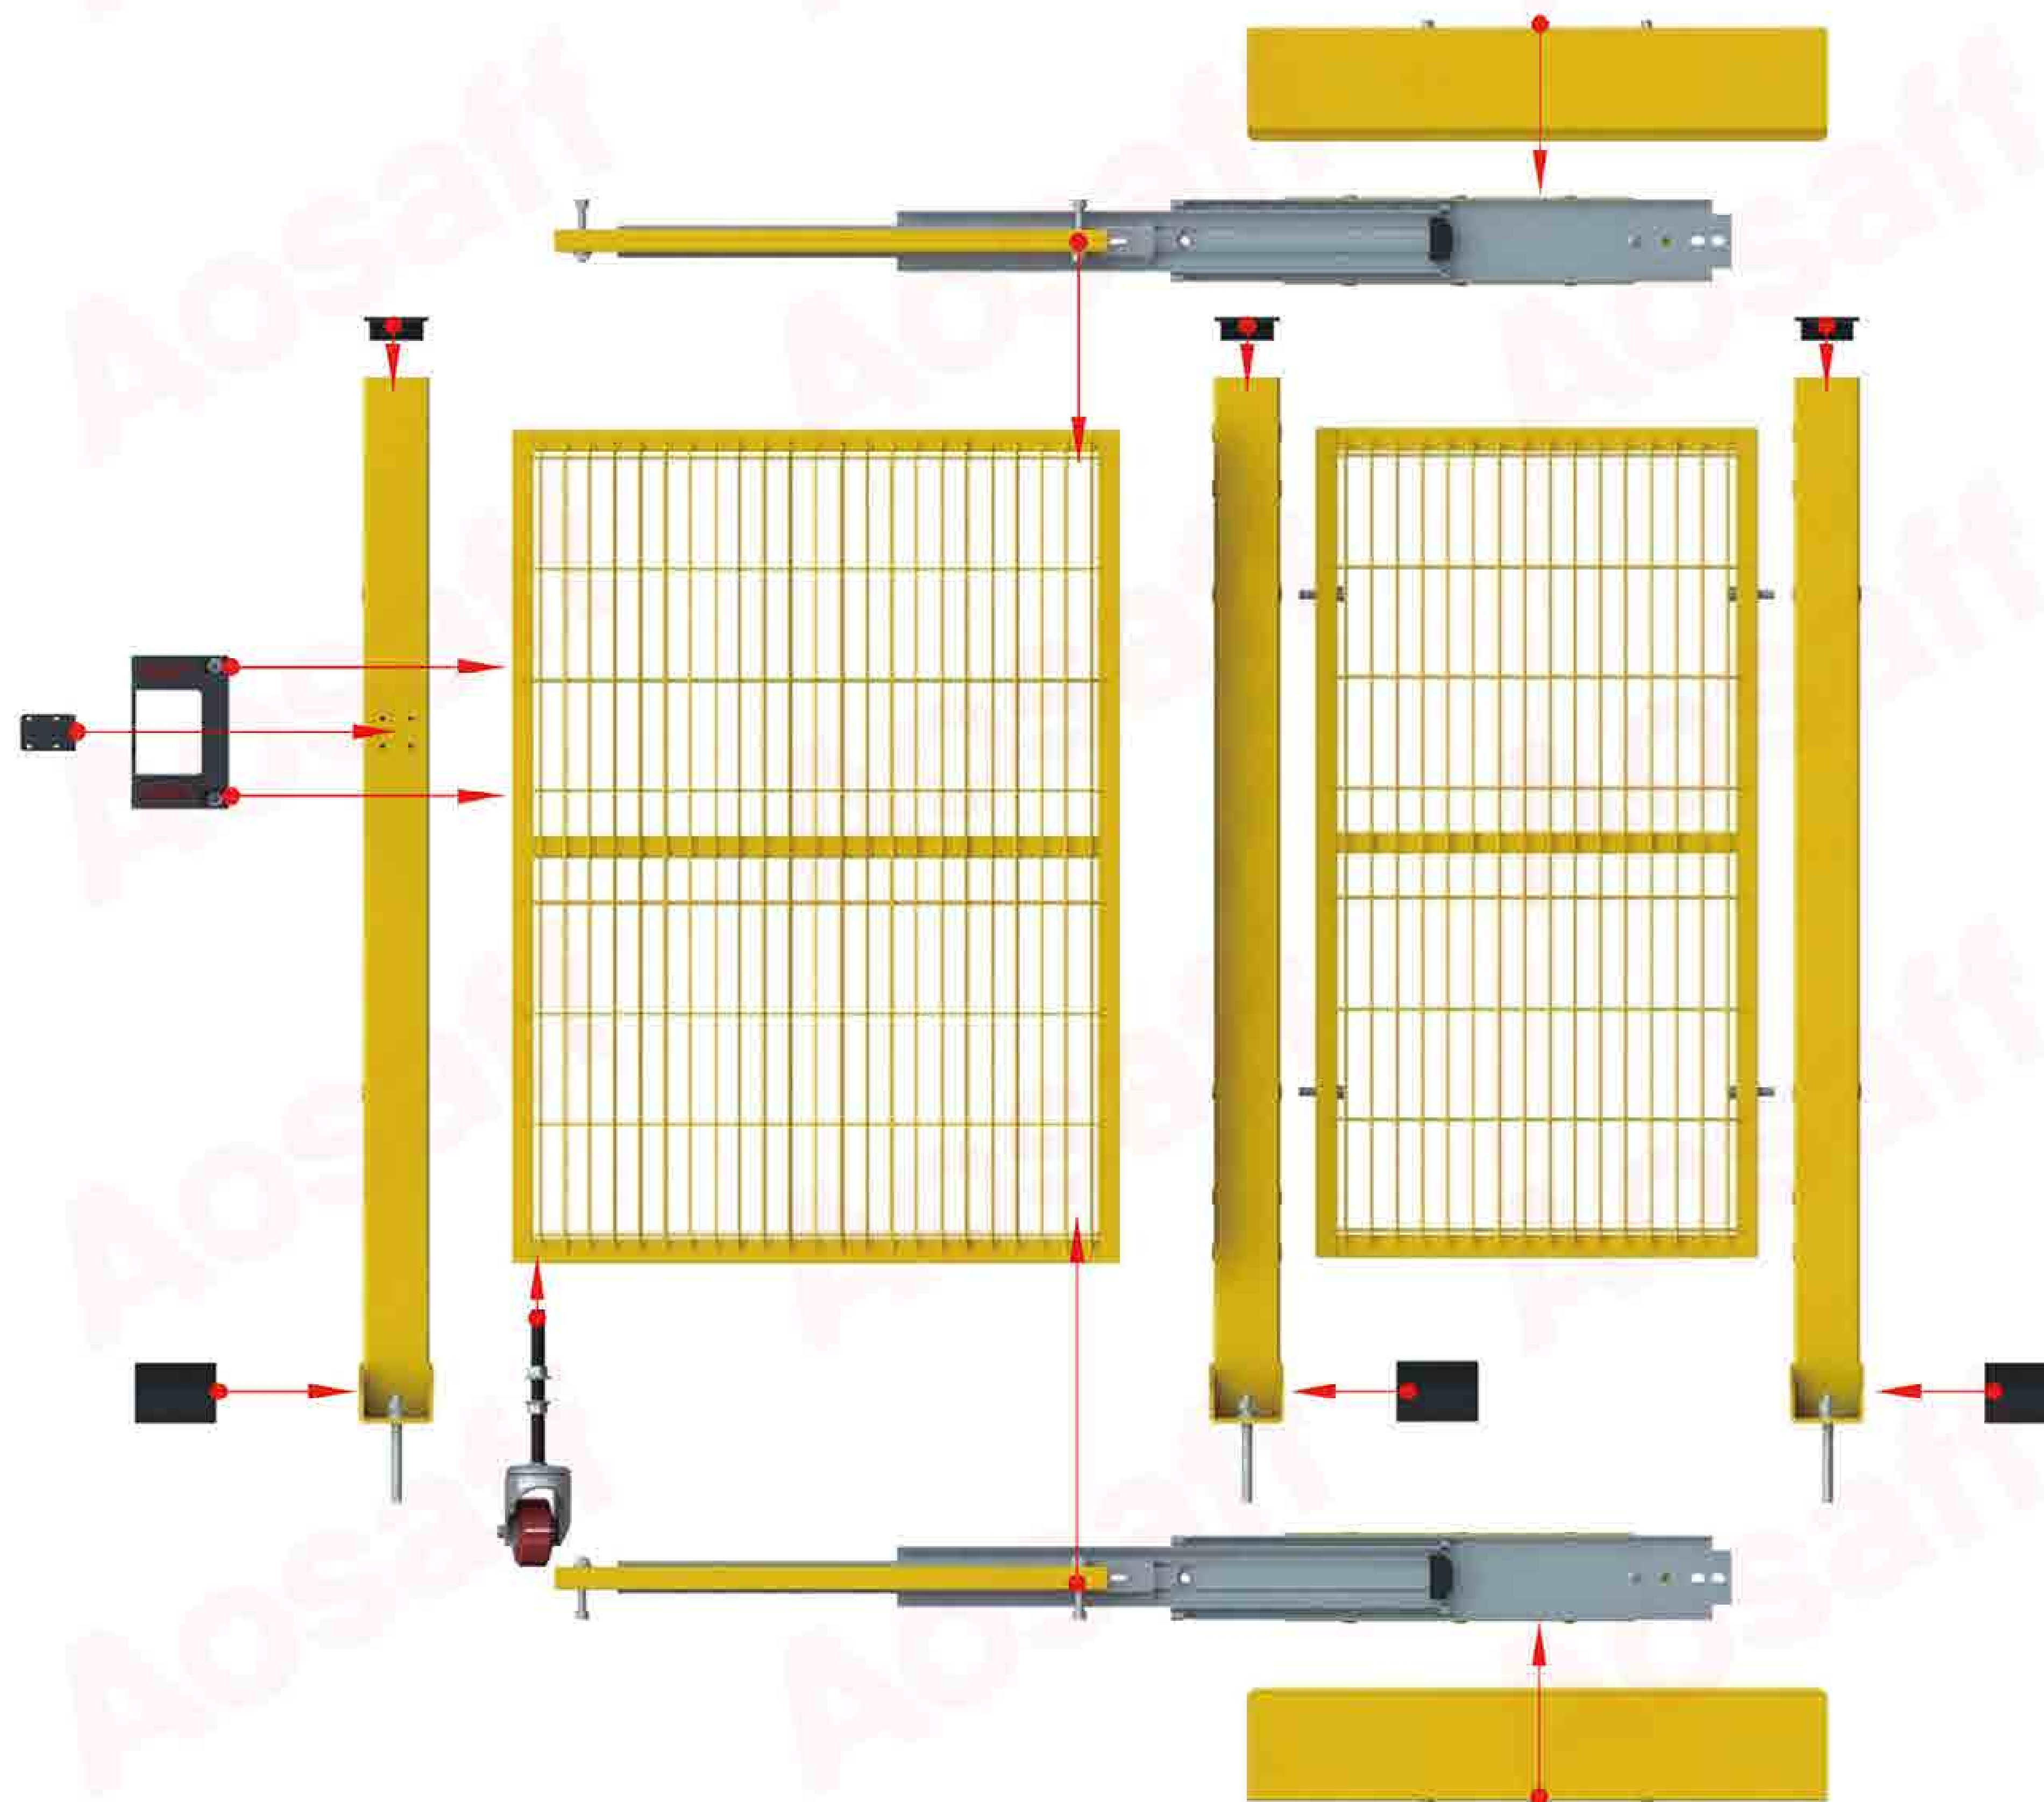



爆炸视图 EXPLODED VIEW

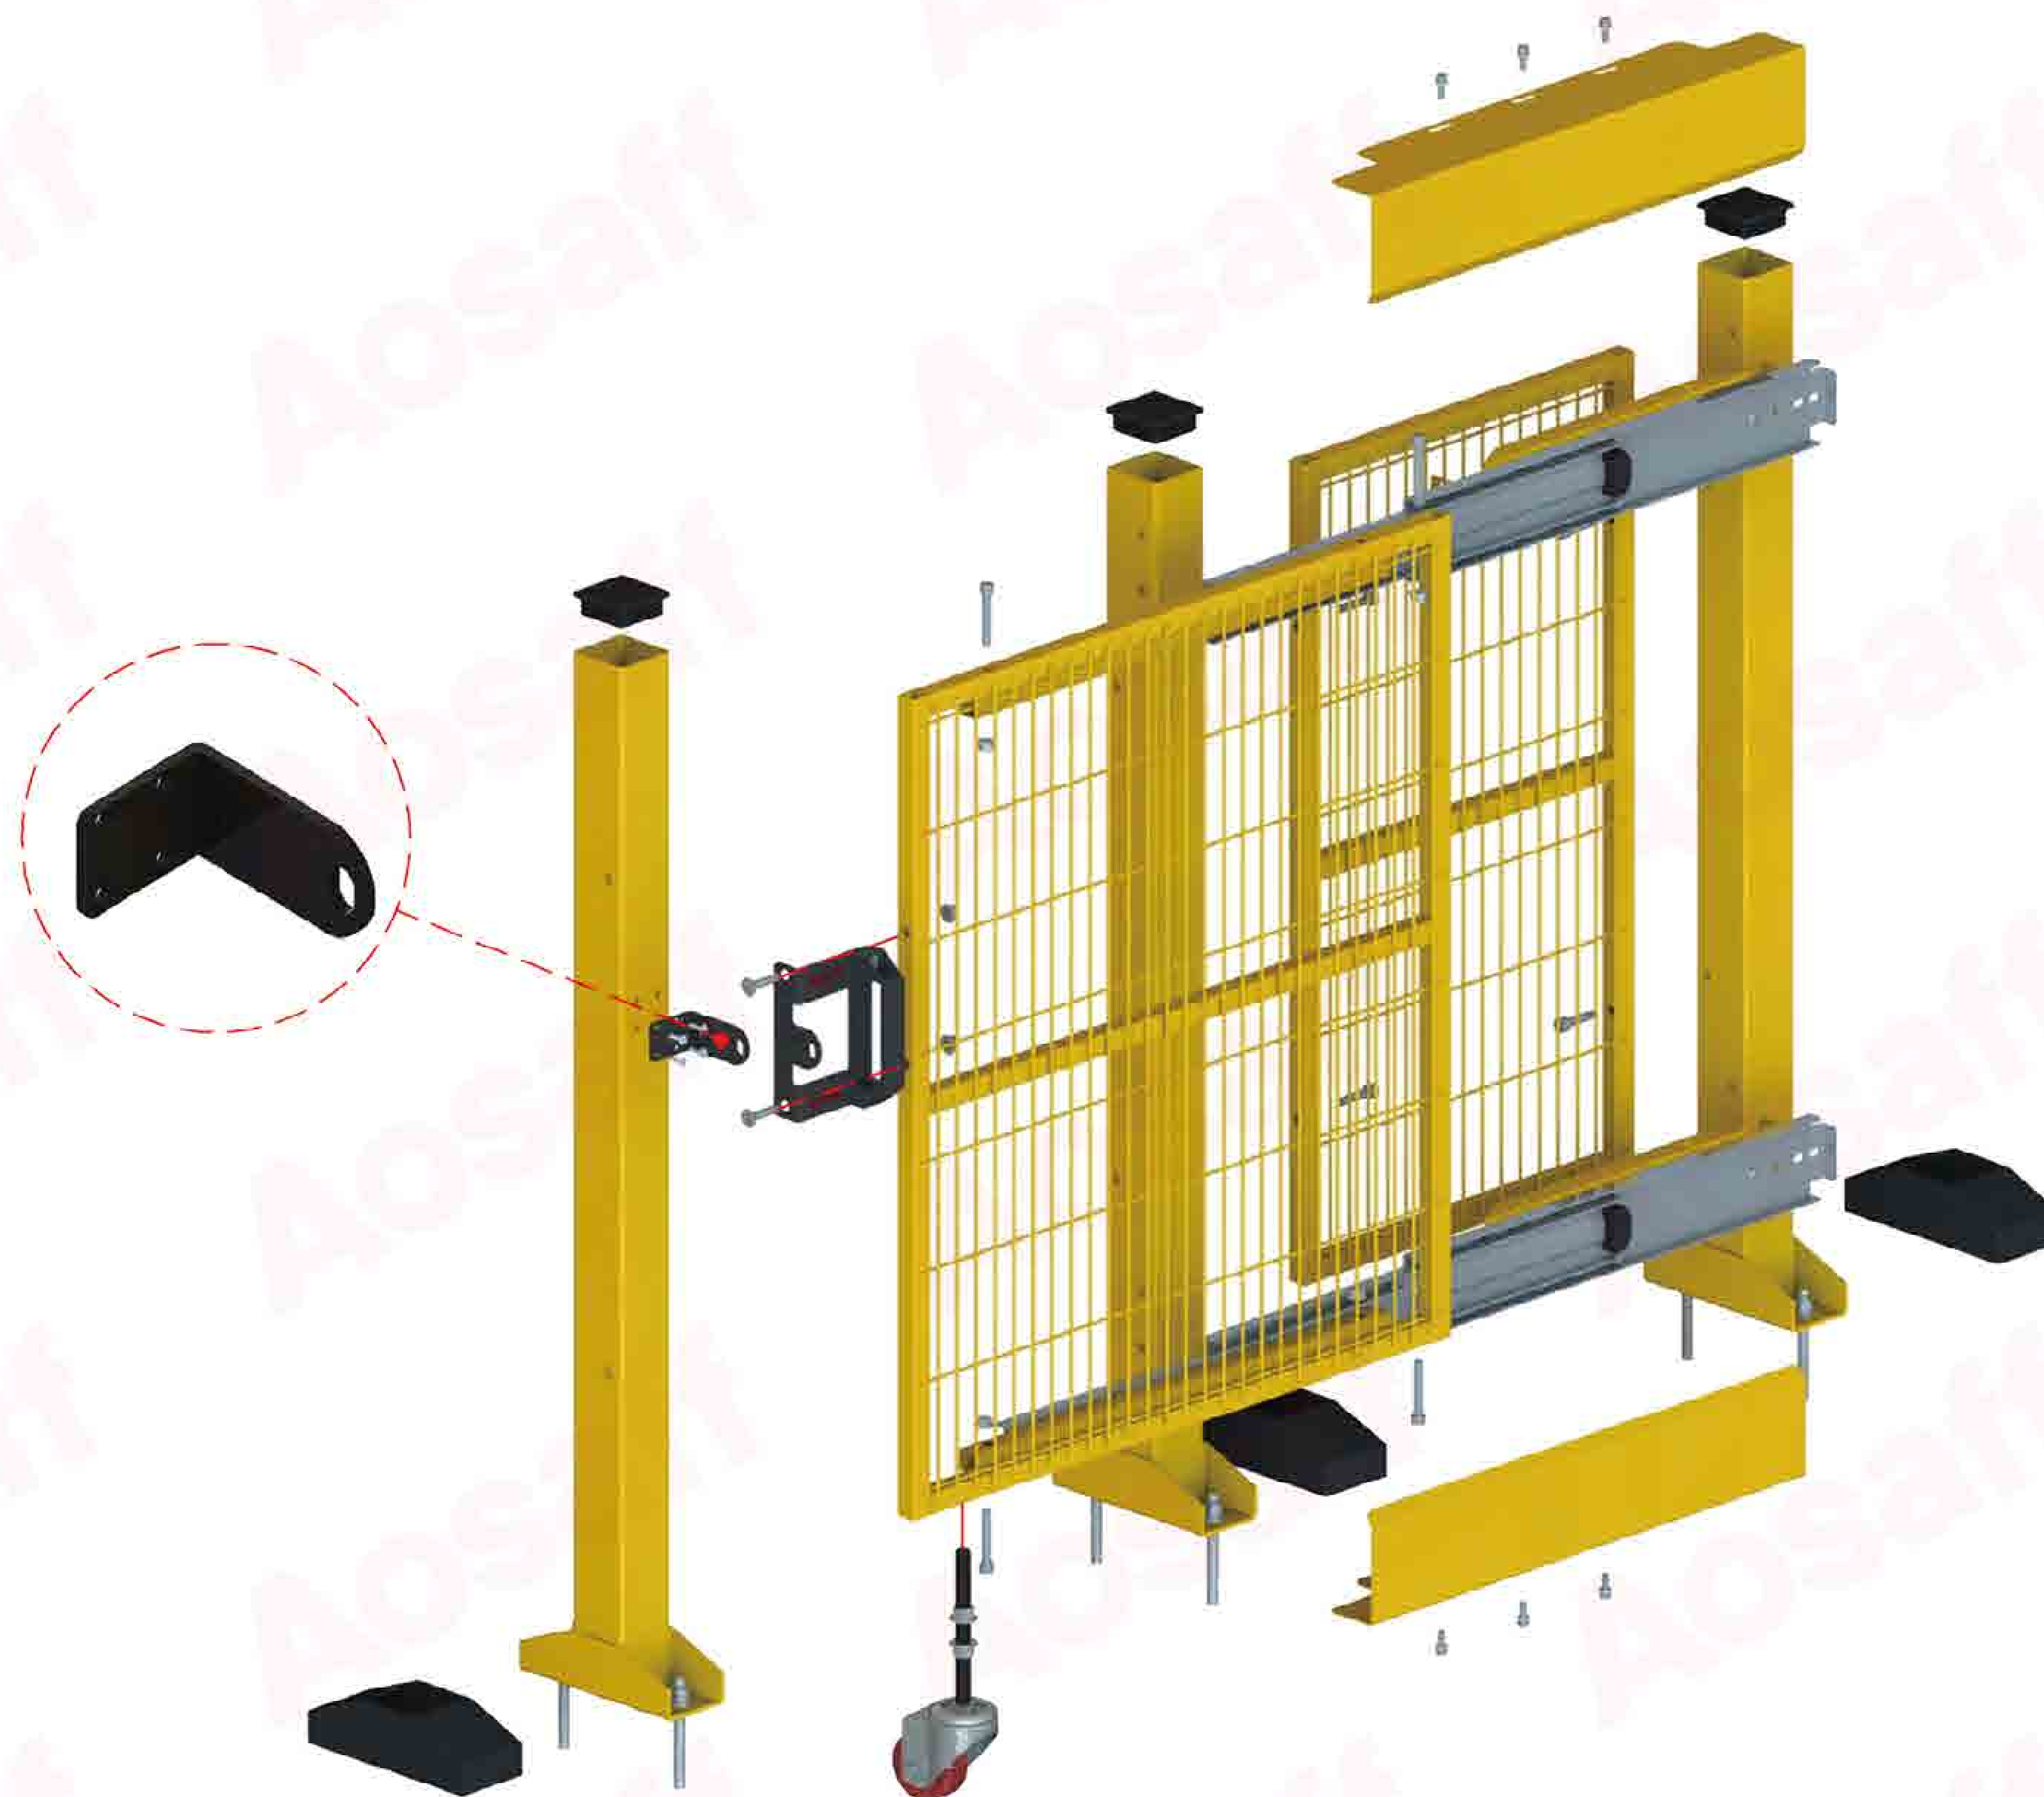

安装步骤 INSTALLATION STEPS

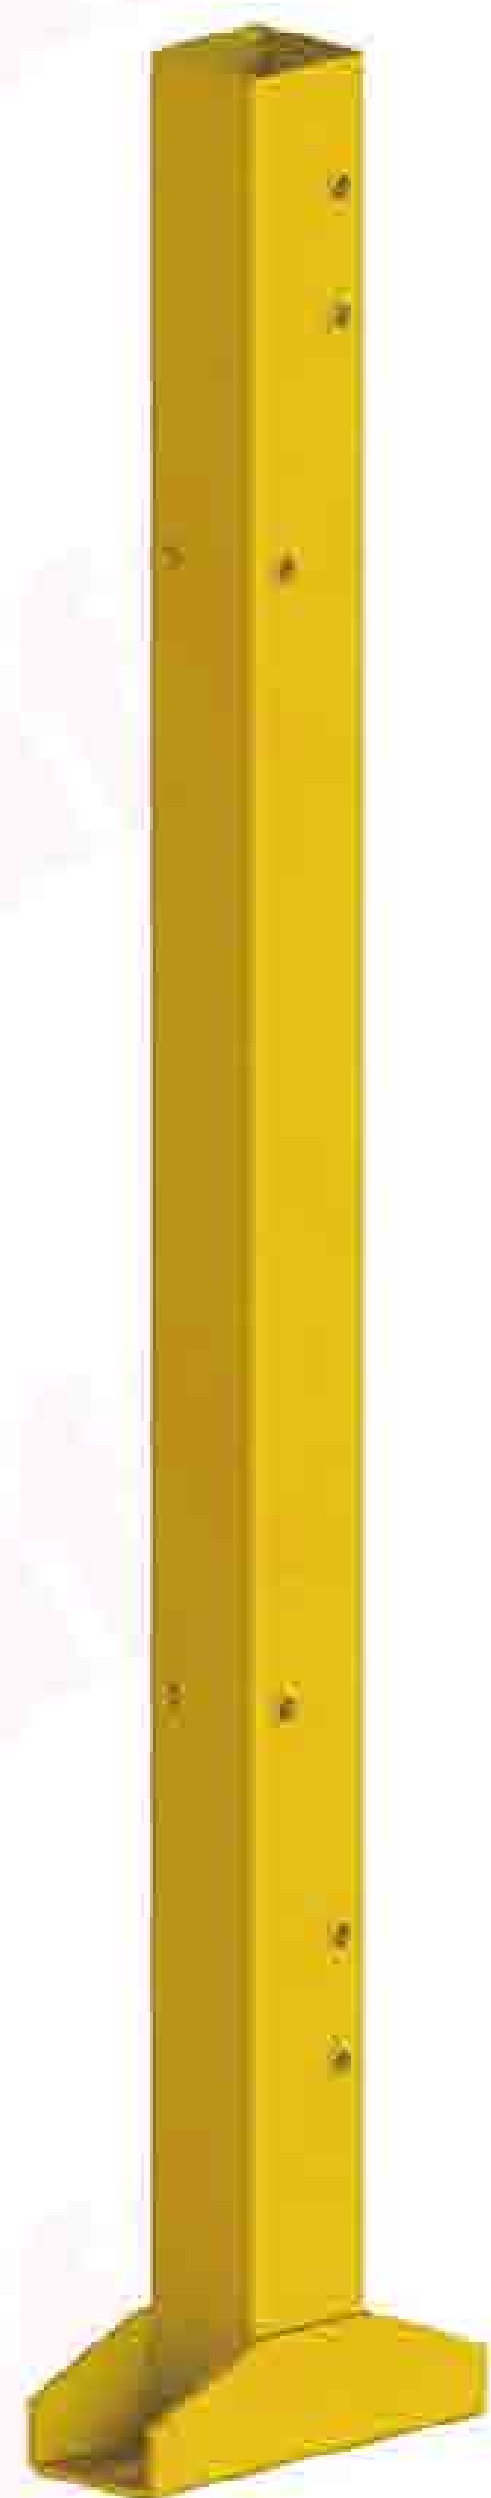

①

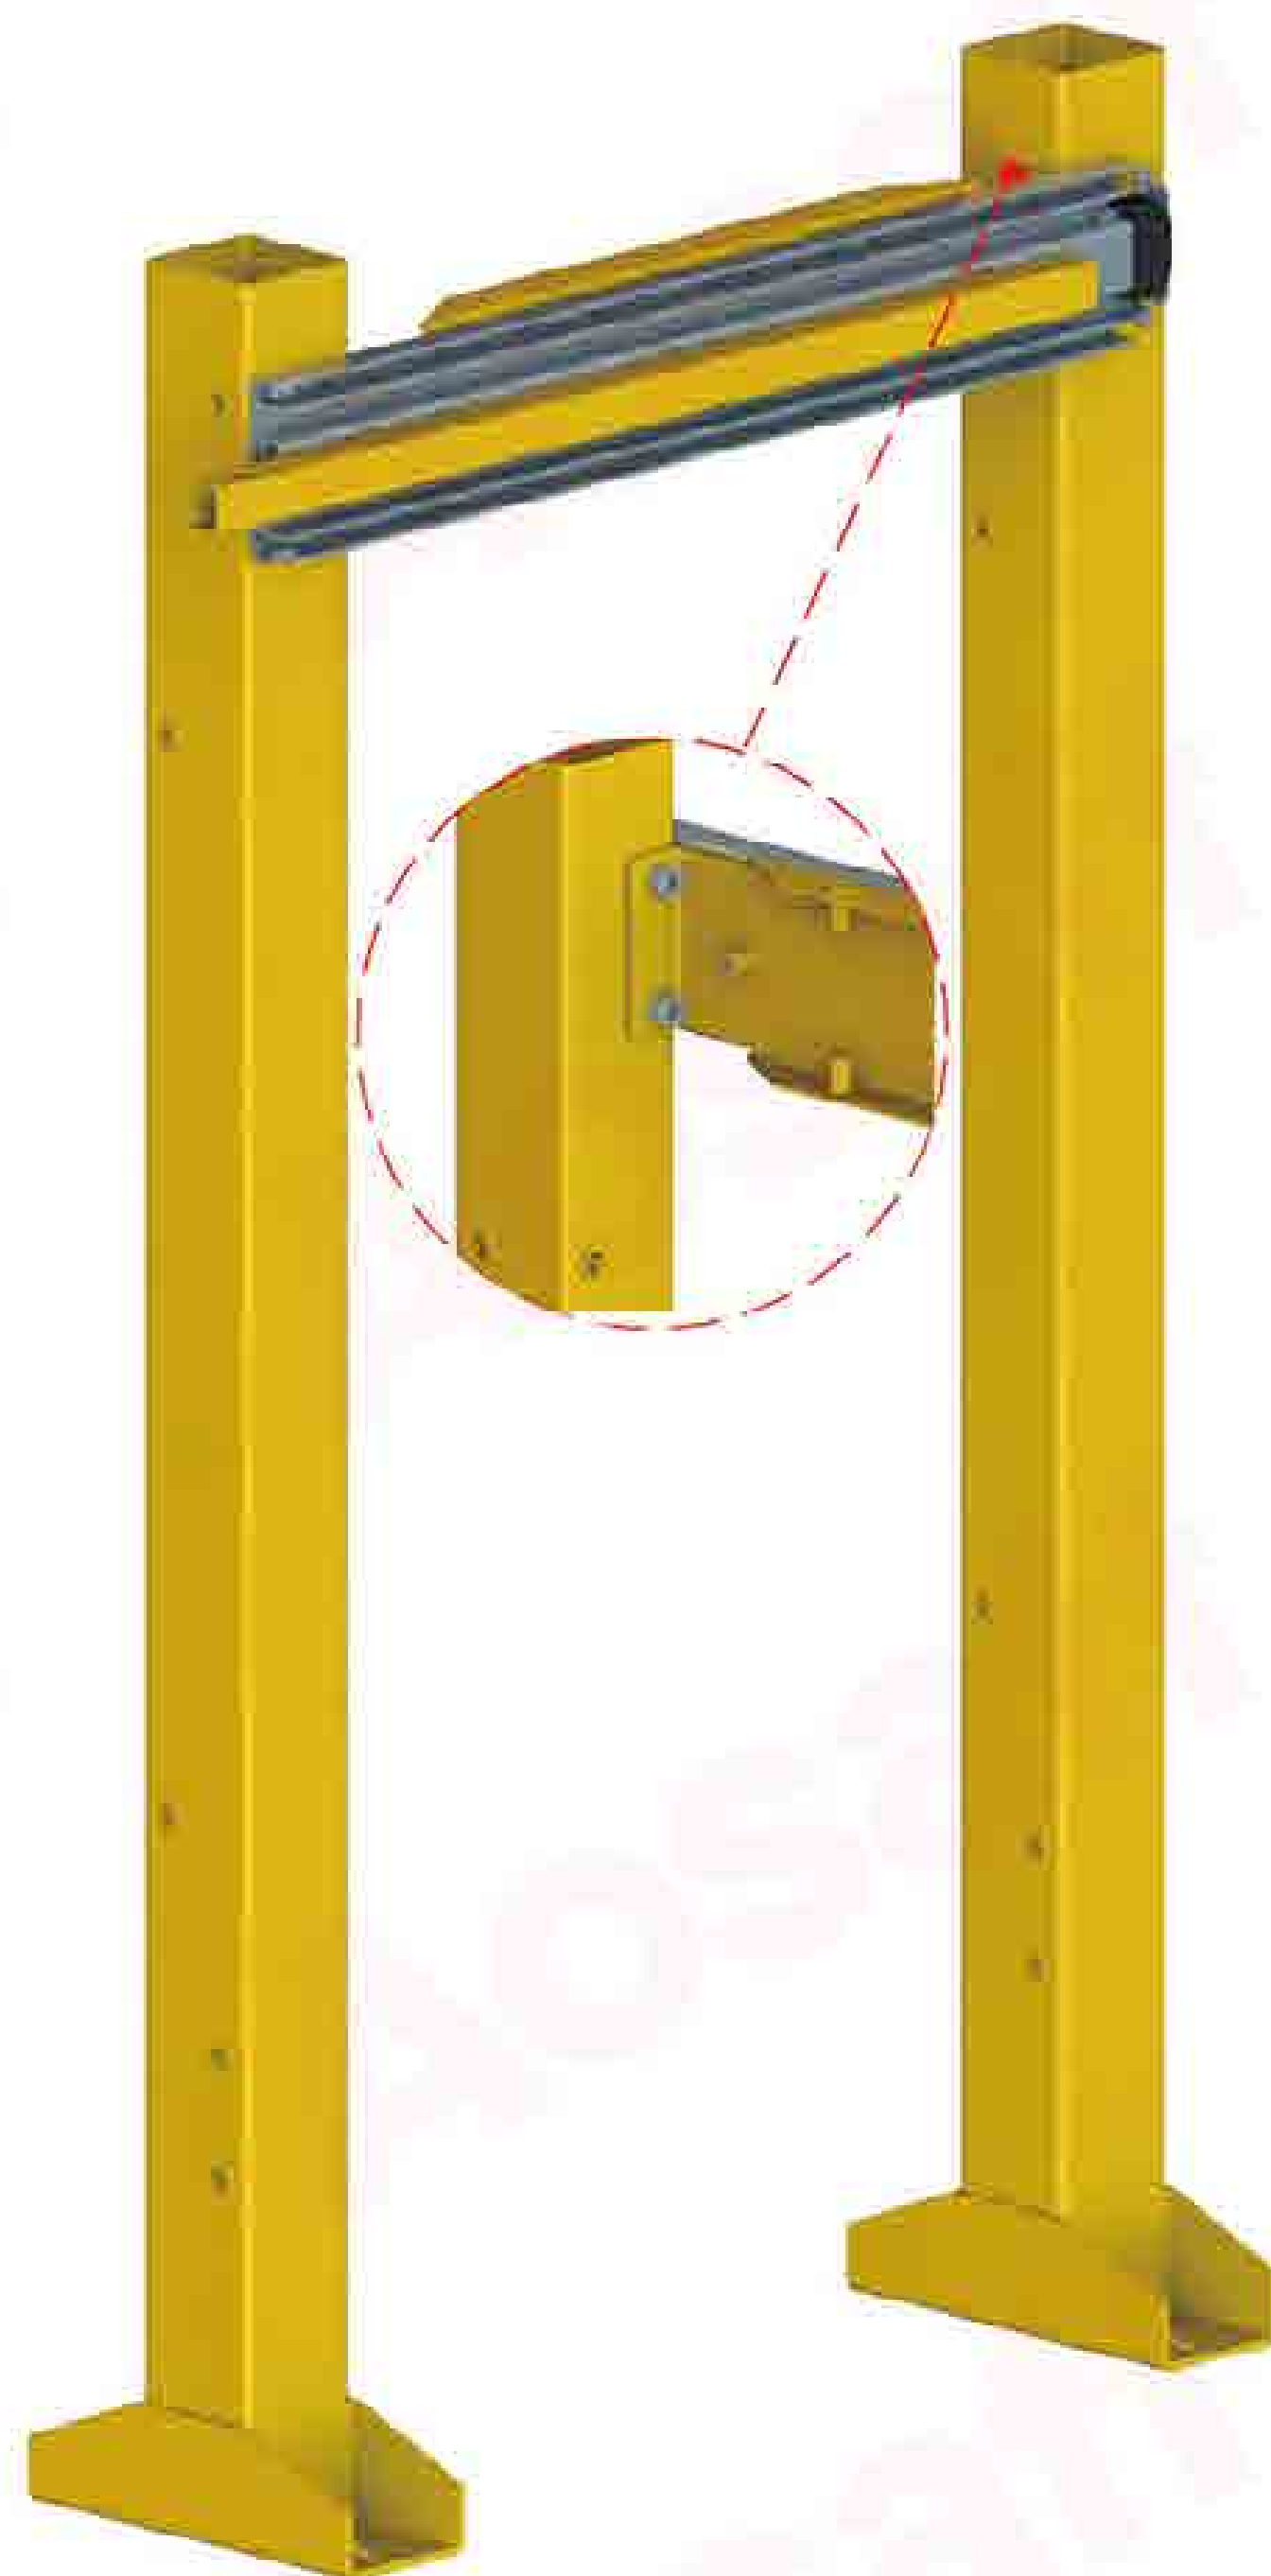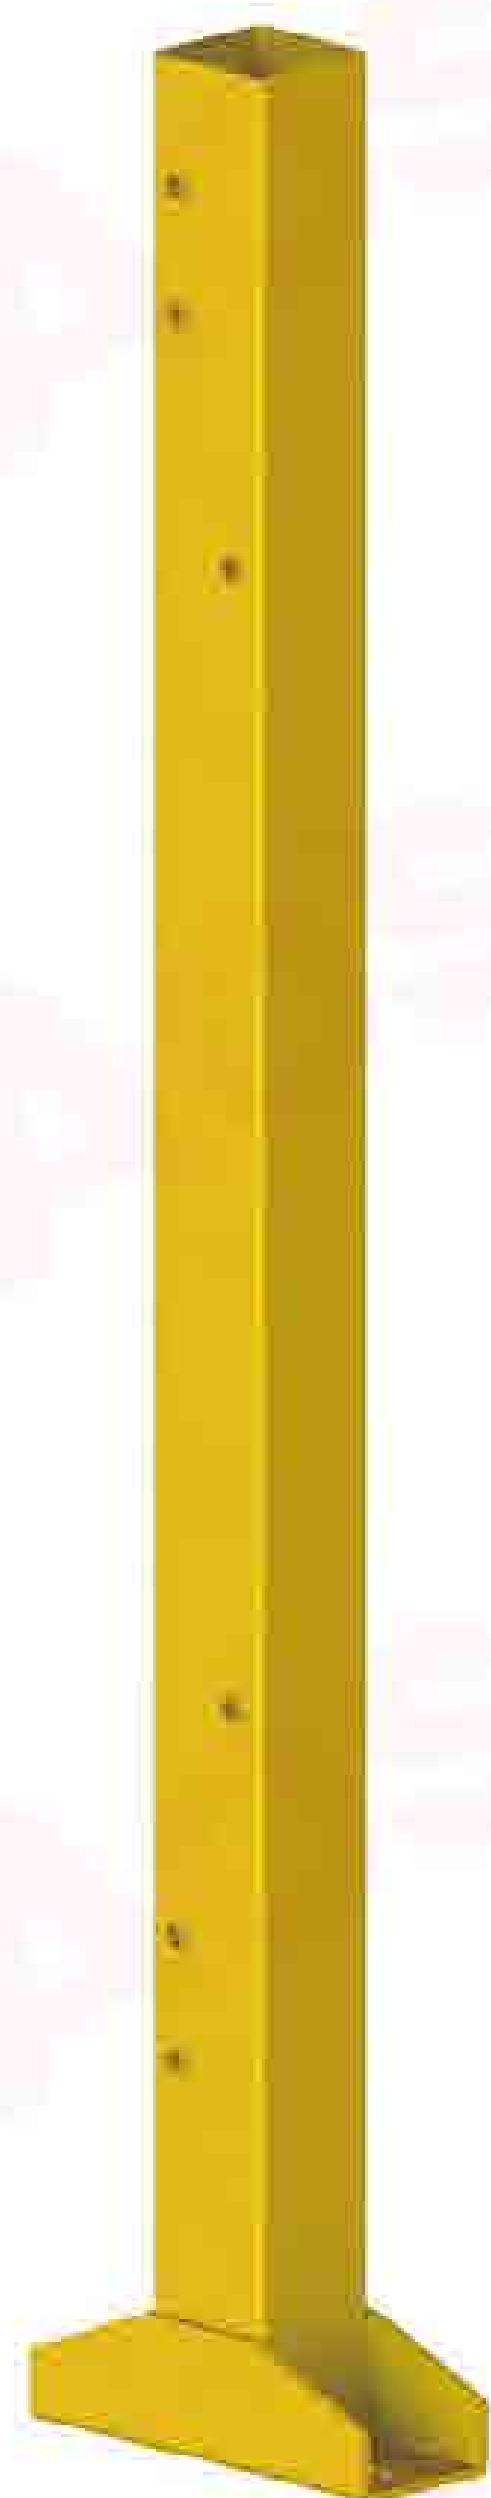

②



③



(4)




(2)



(1)

(5)



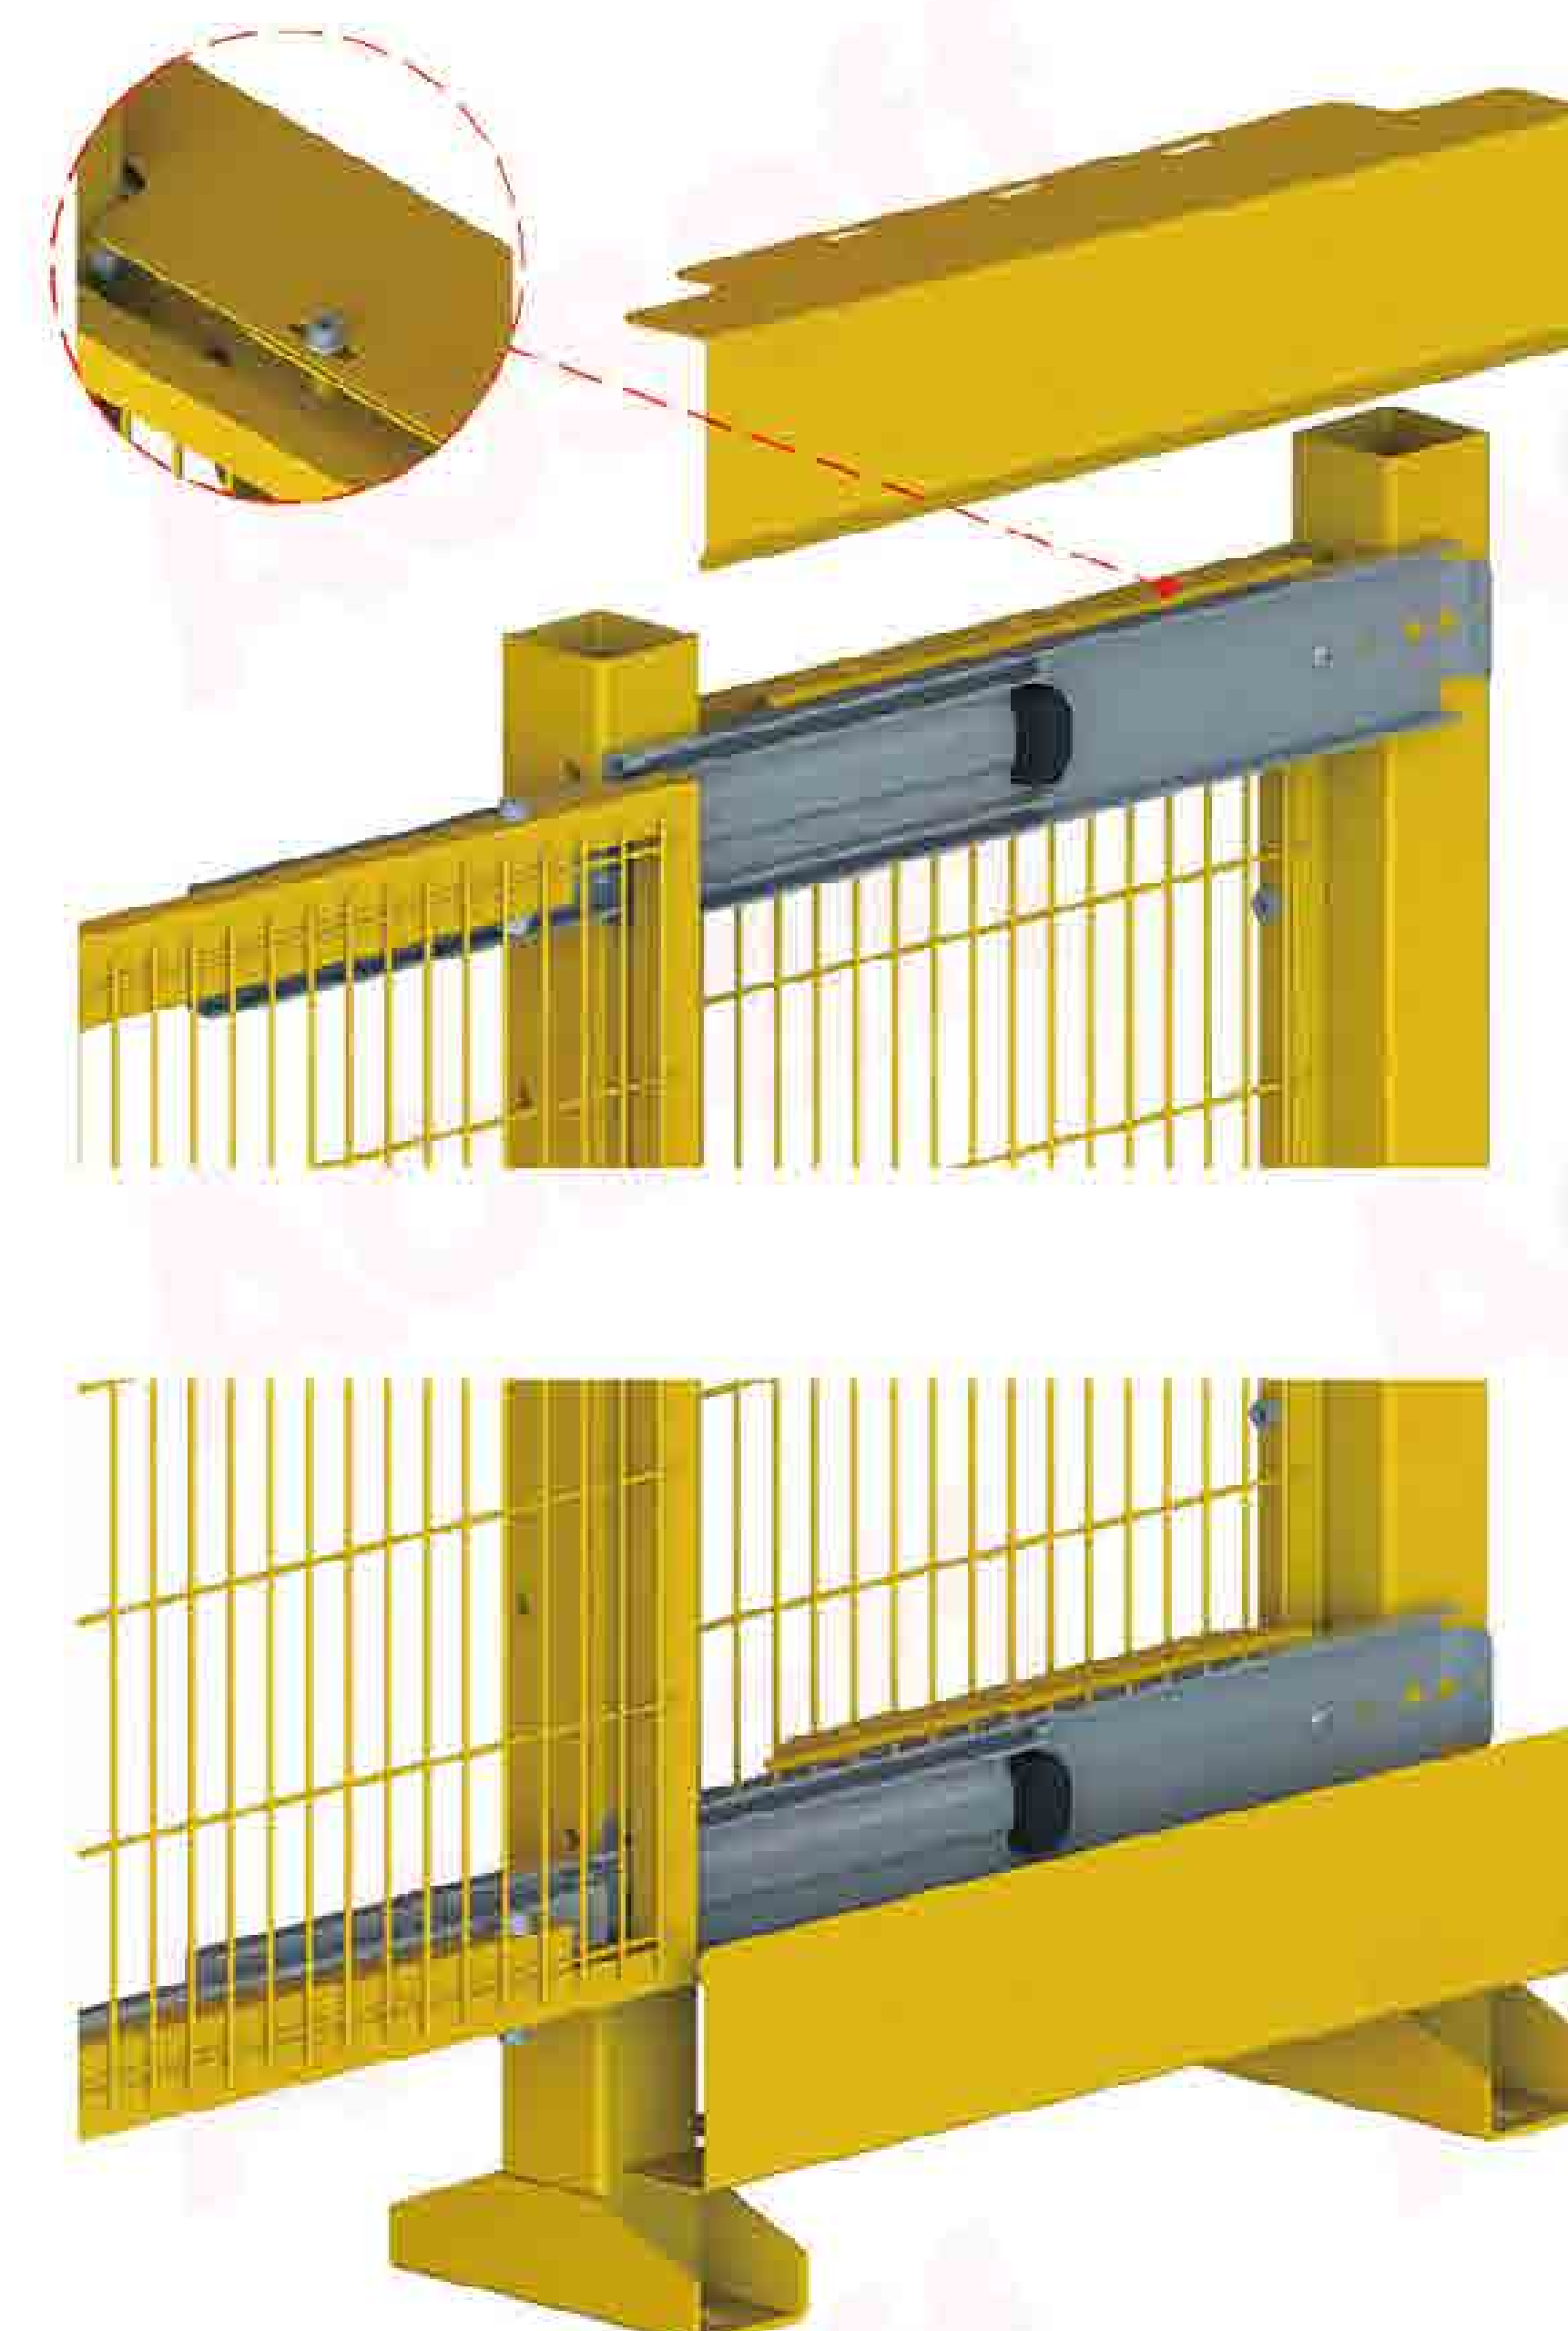



Aosaff


奥图股份

通用型滑动门 安装说明

Sliding
Door
Installation



位置视图 POSITION VIEW

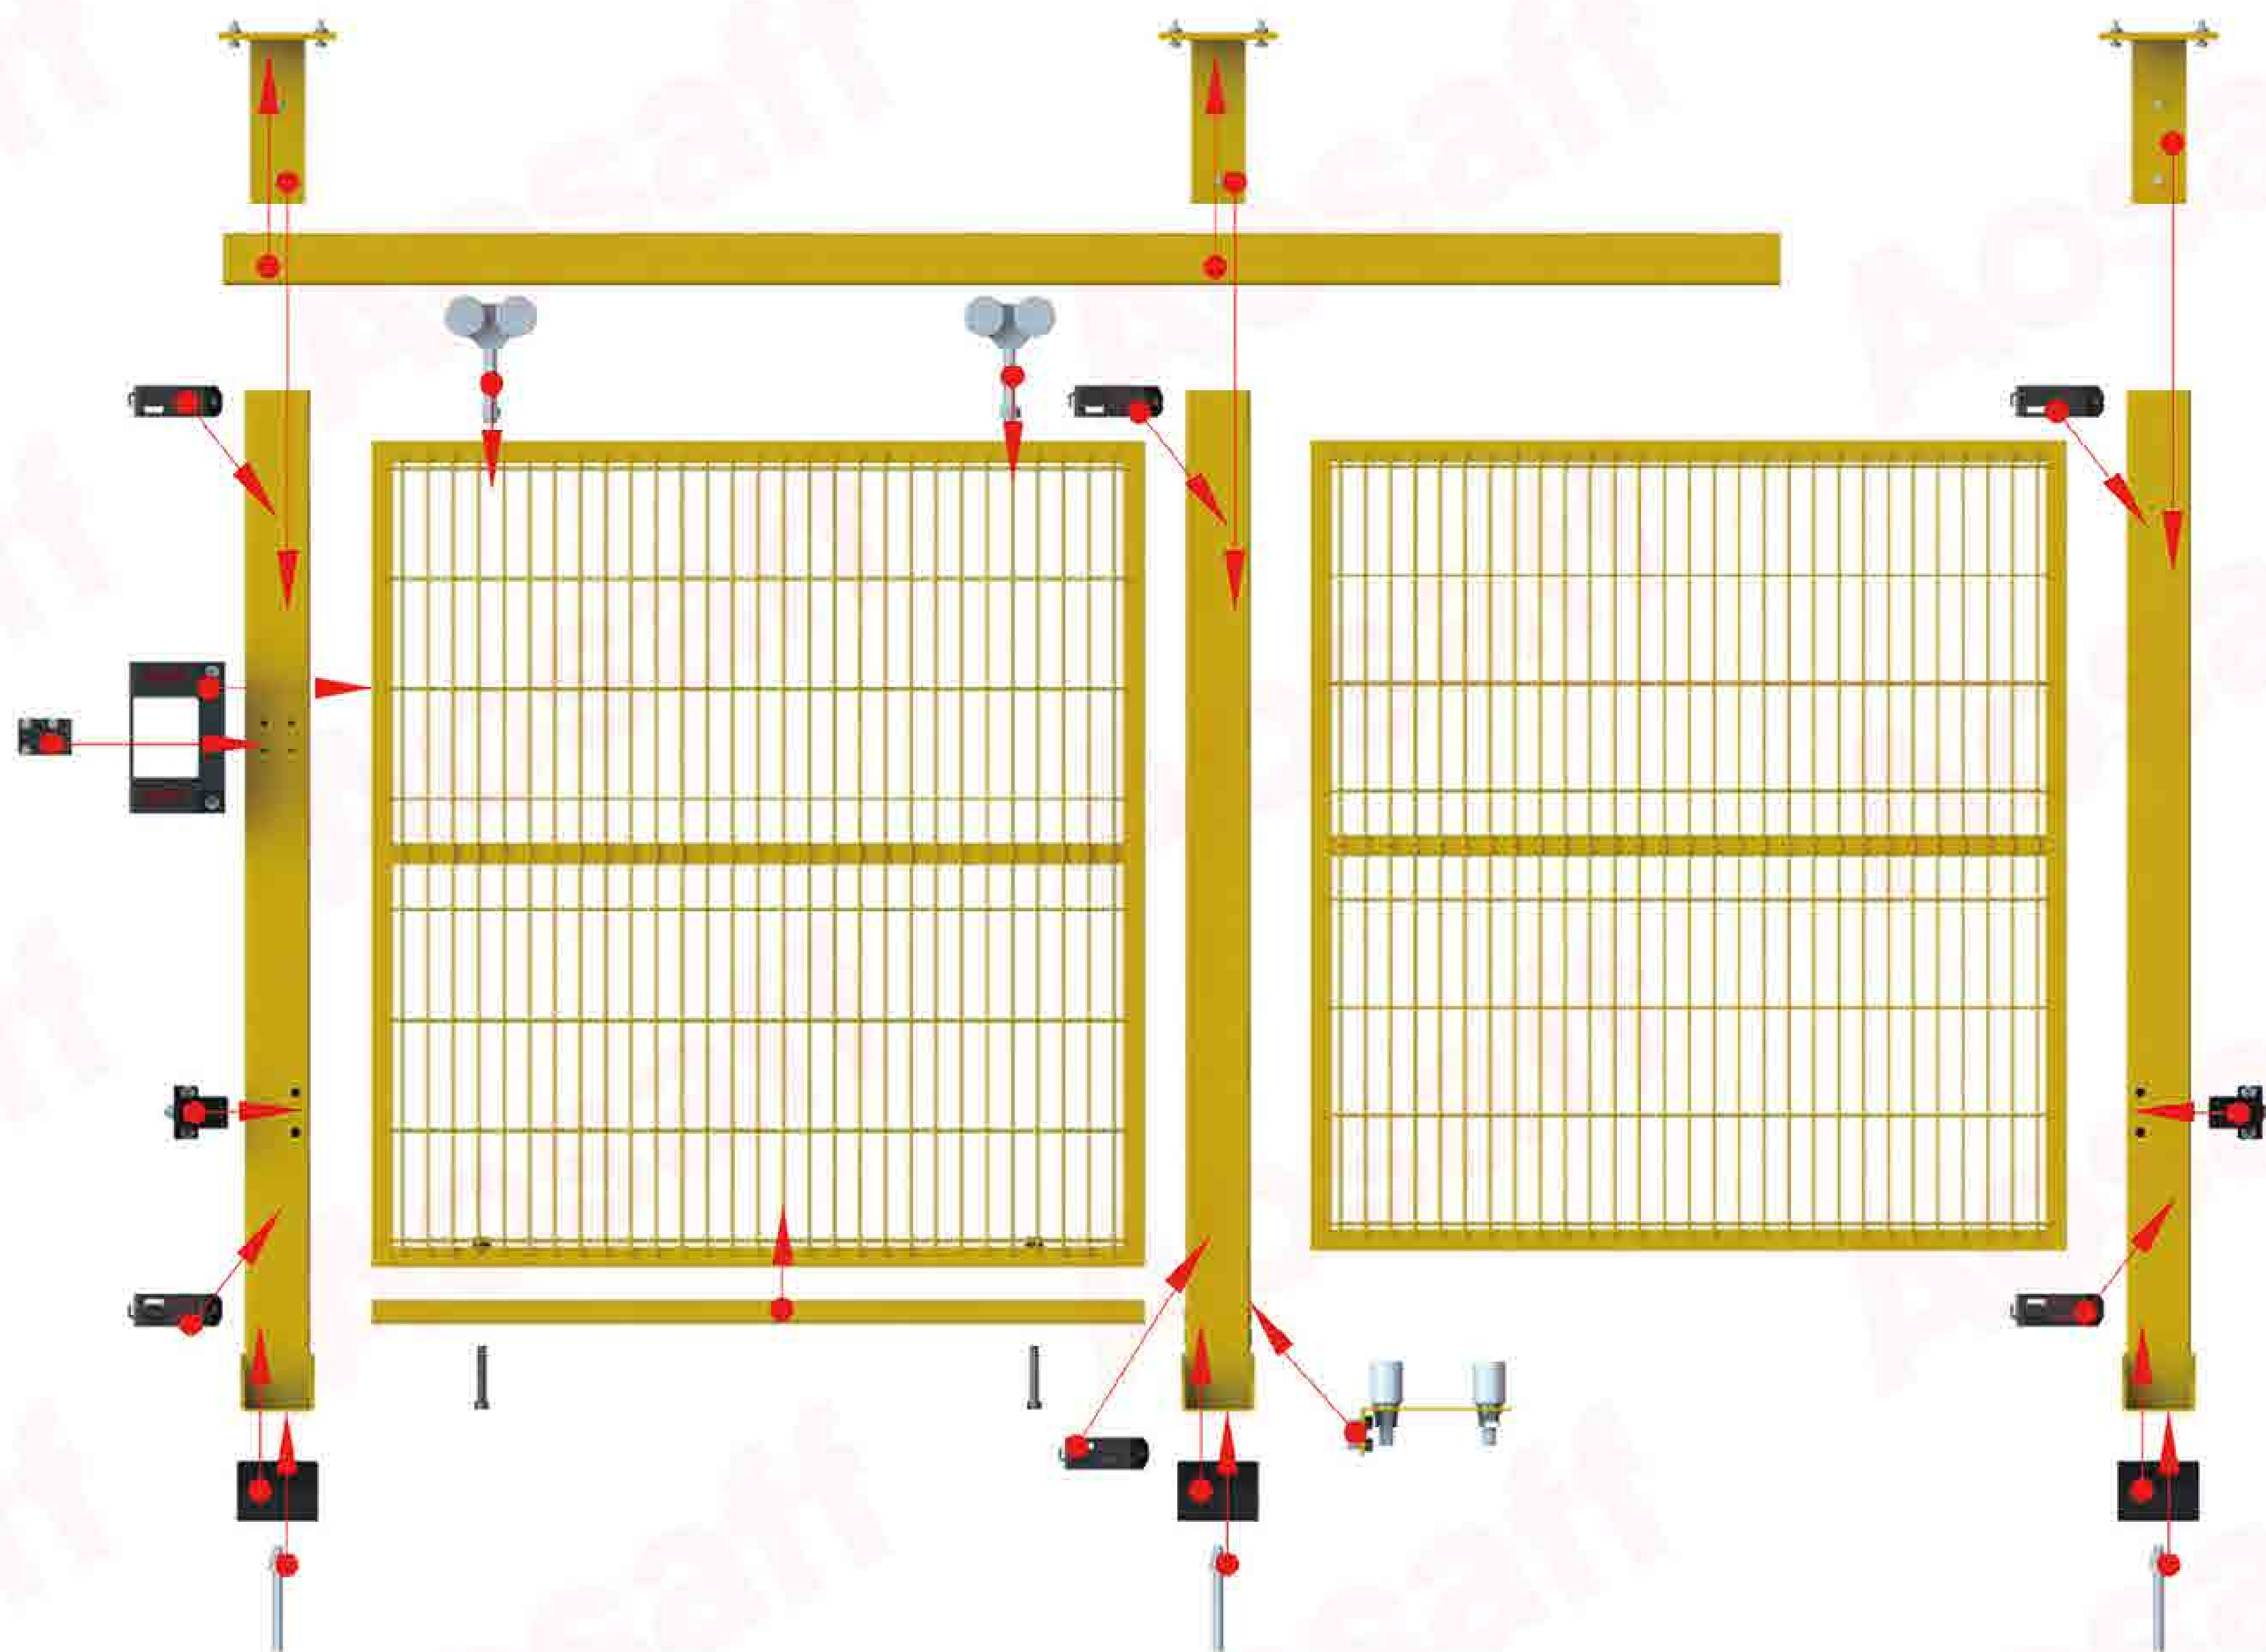

零部件 COMPONENTS & PARTS



立柱和网片
Column & panel




20*20方管
20*20 square tube



安装工装
Tooling




膨胀螺栓×6
Expansion bolt

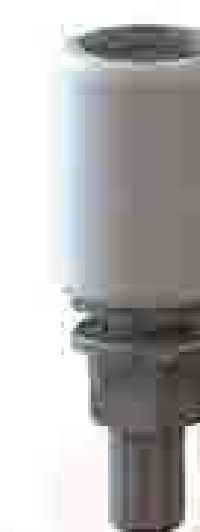

尼龙轮×4
Nylon wheel



滑动门上滑轨
Slide rail

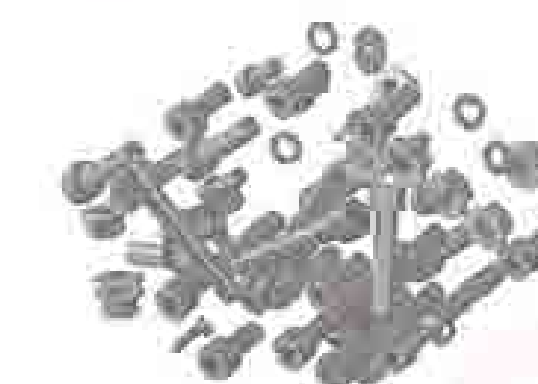

螺钉 Mounting screws



缓冲块组件
Buffer block component



上滑轮×2
Pulley



下导轮支架
Lower wheel support



挂锁板 Padlock plate



上卡环 (带logo) ×3
Upper snap ring with logo



下卡环 (带logo) ×3
Lower snap ring with logo



把手组件
Handle component



L型吊架板×3
L-type hanger plate



防尘盖 Dust cover ×3


安装步骤 INSTALLATION STEPS



①

②





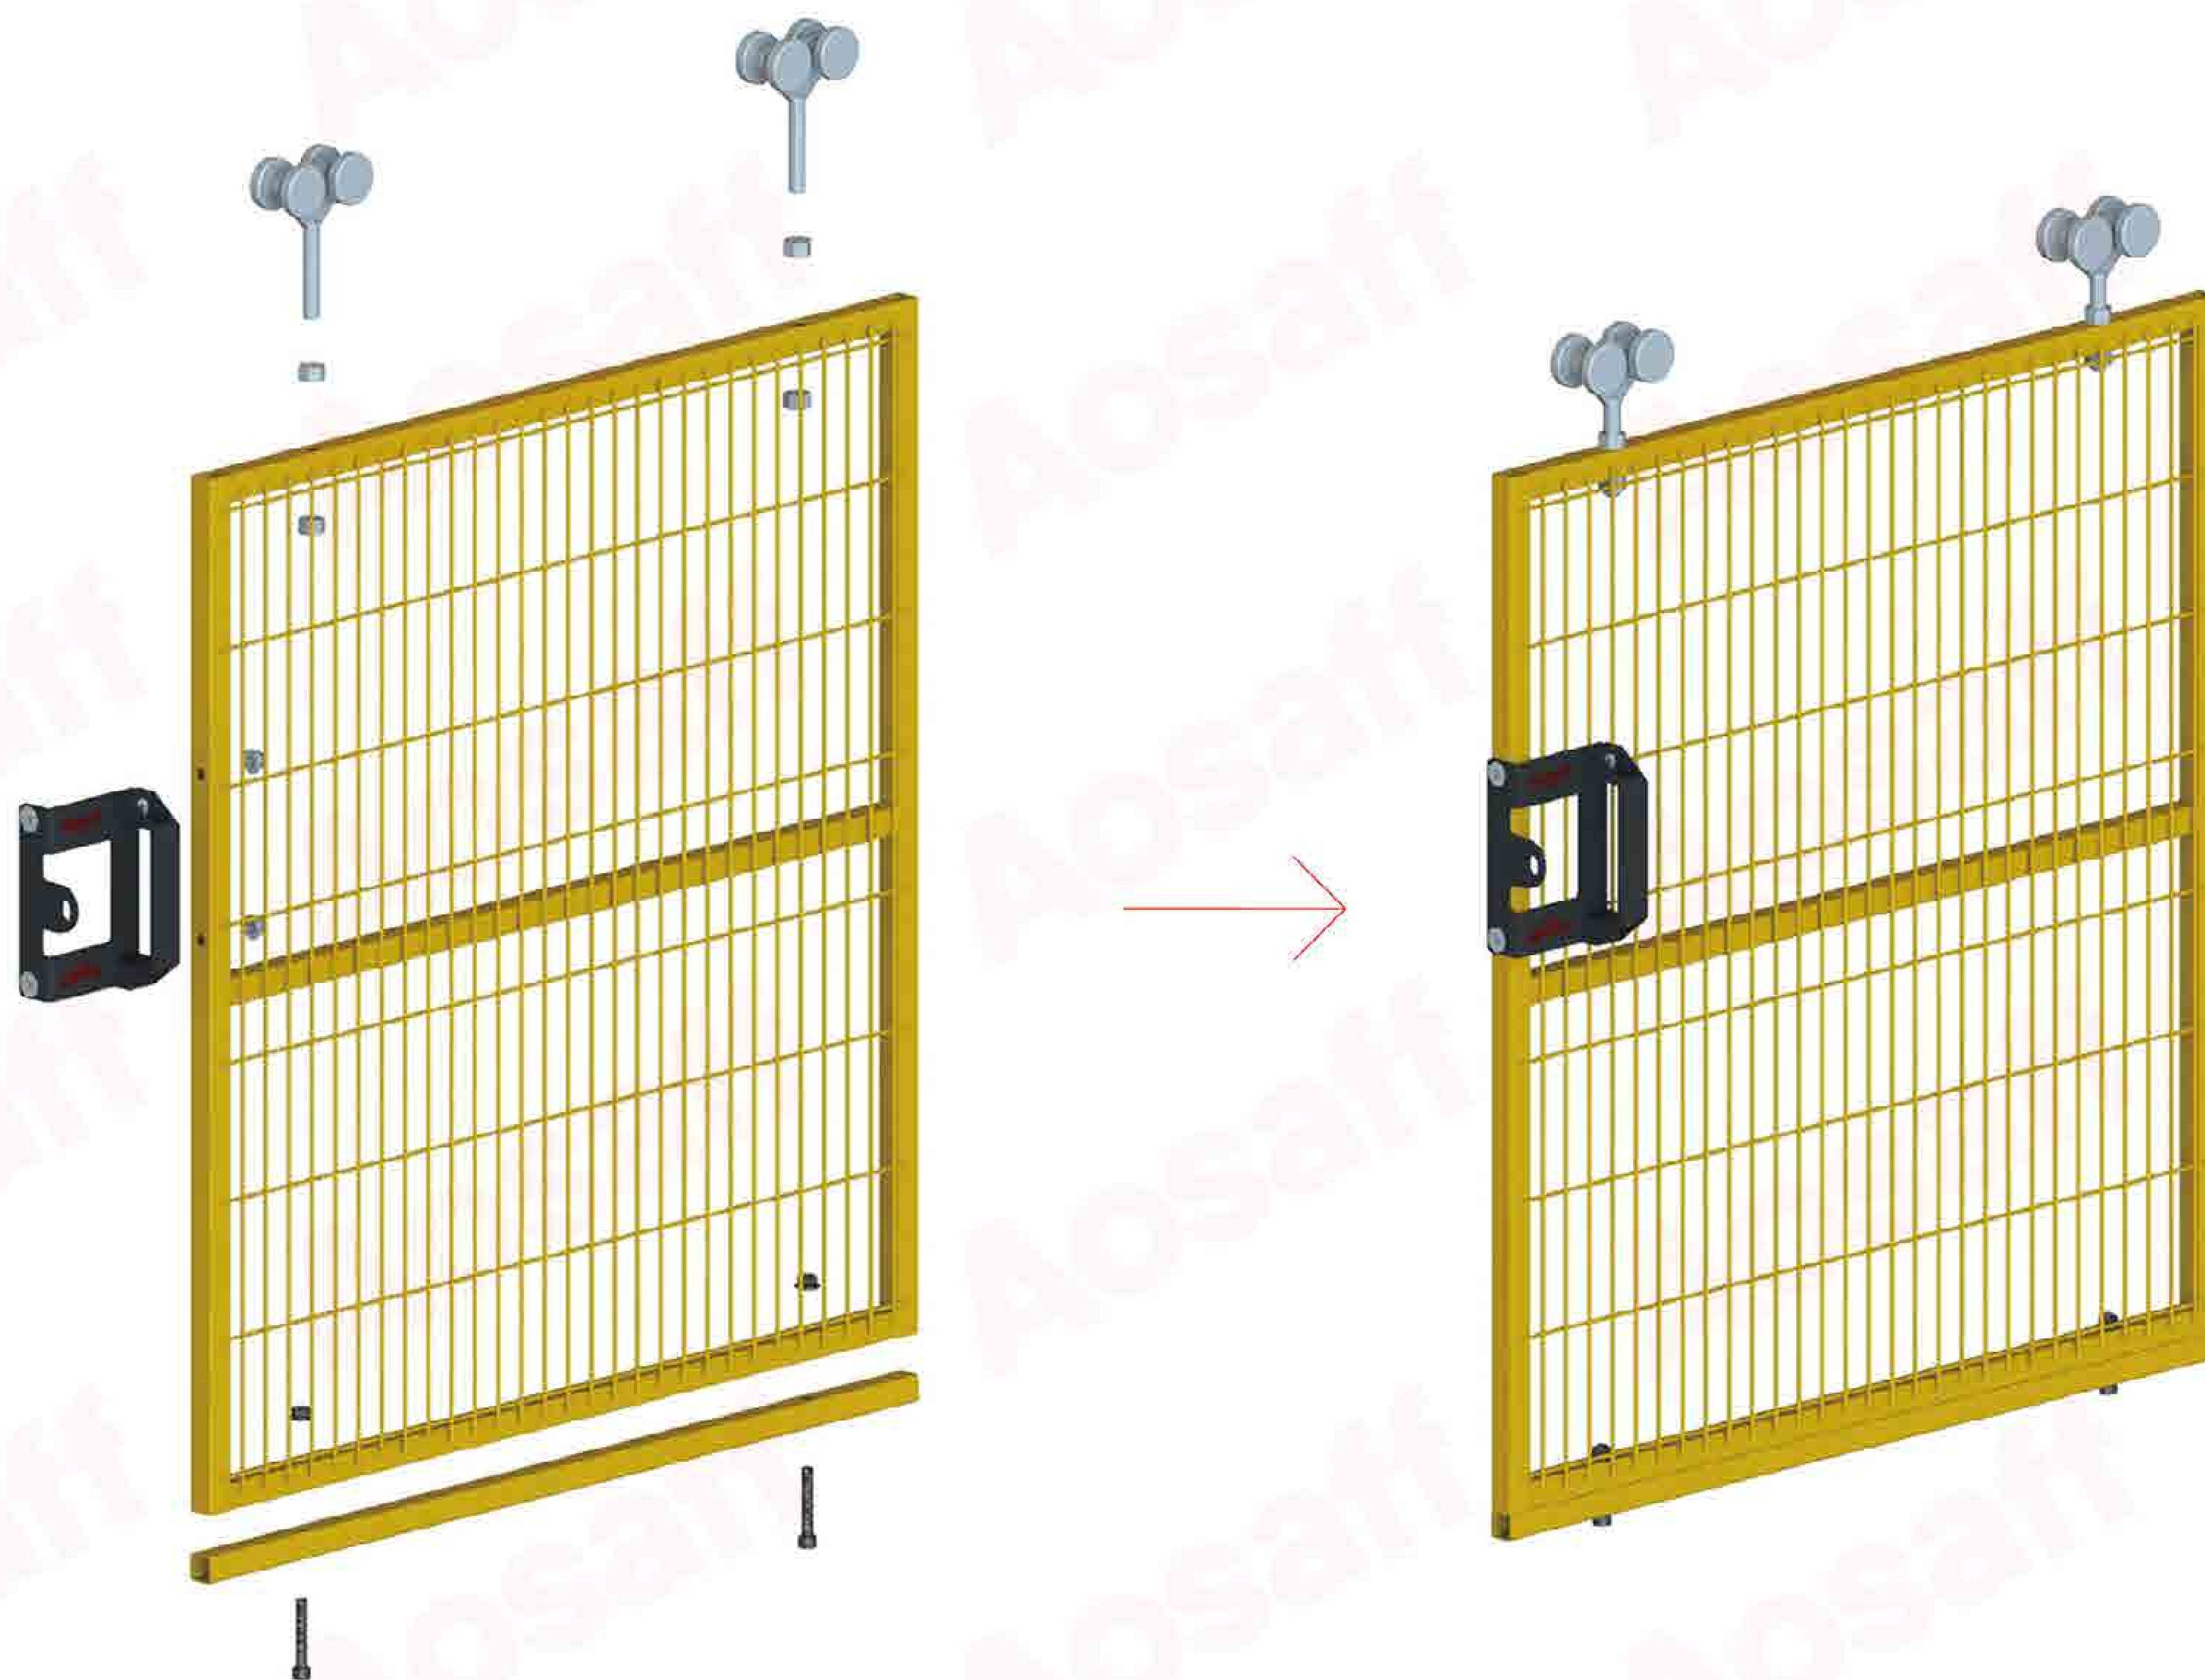


⑤



⑥

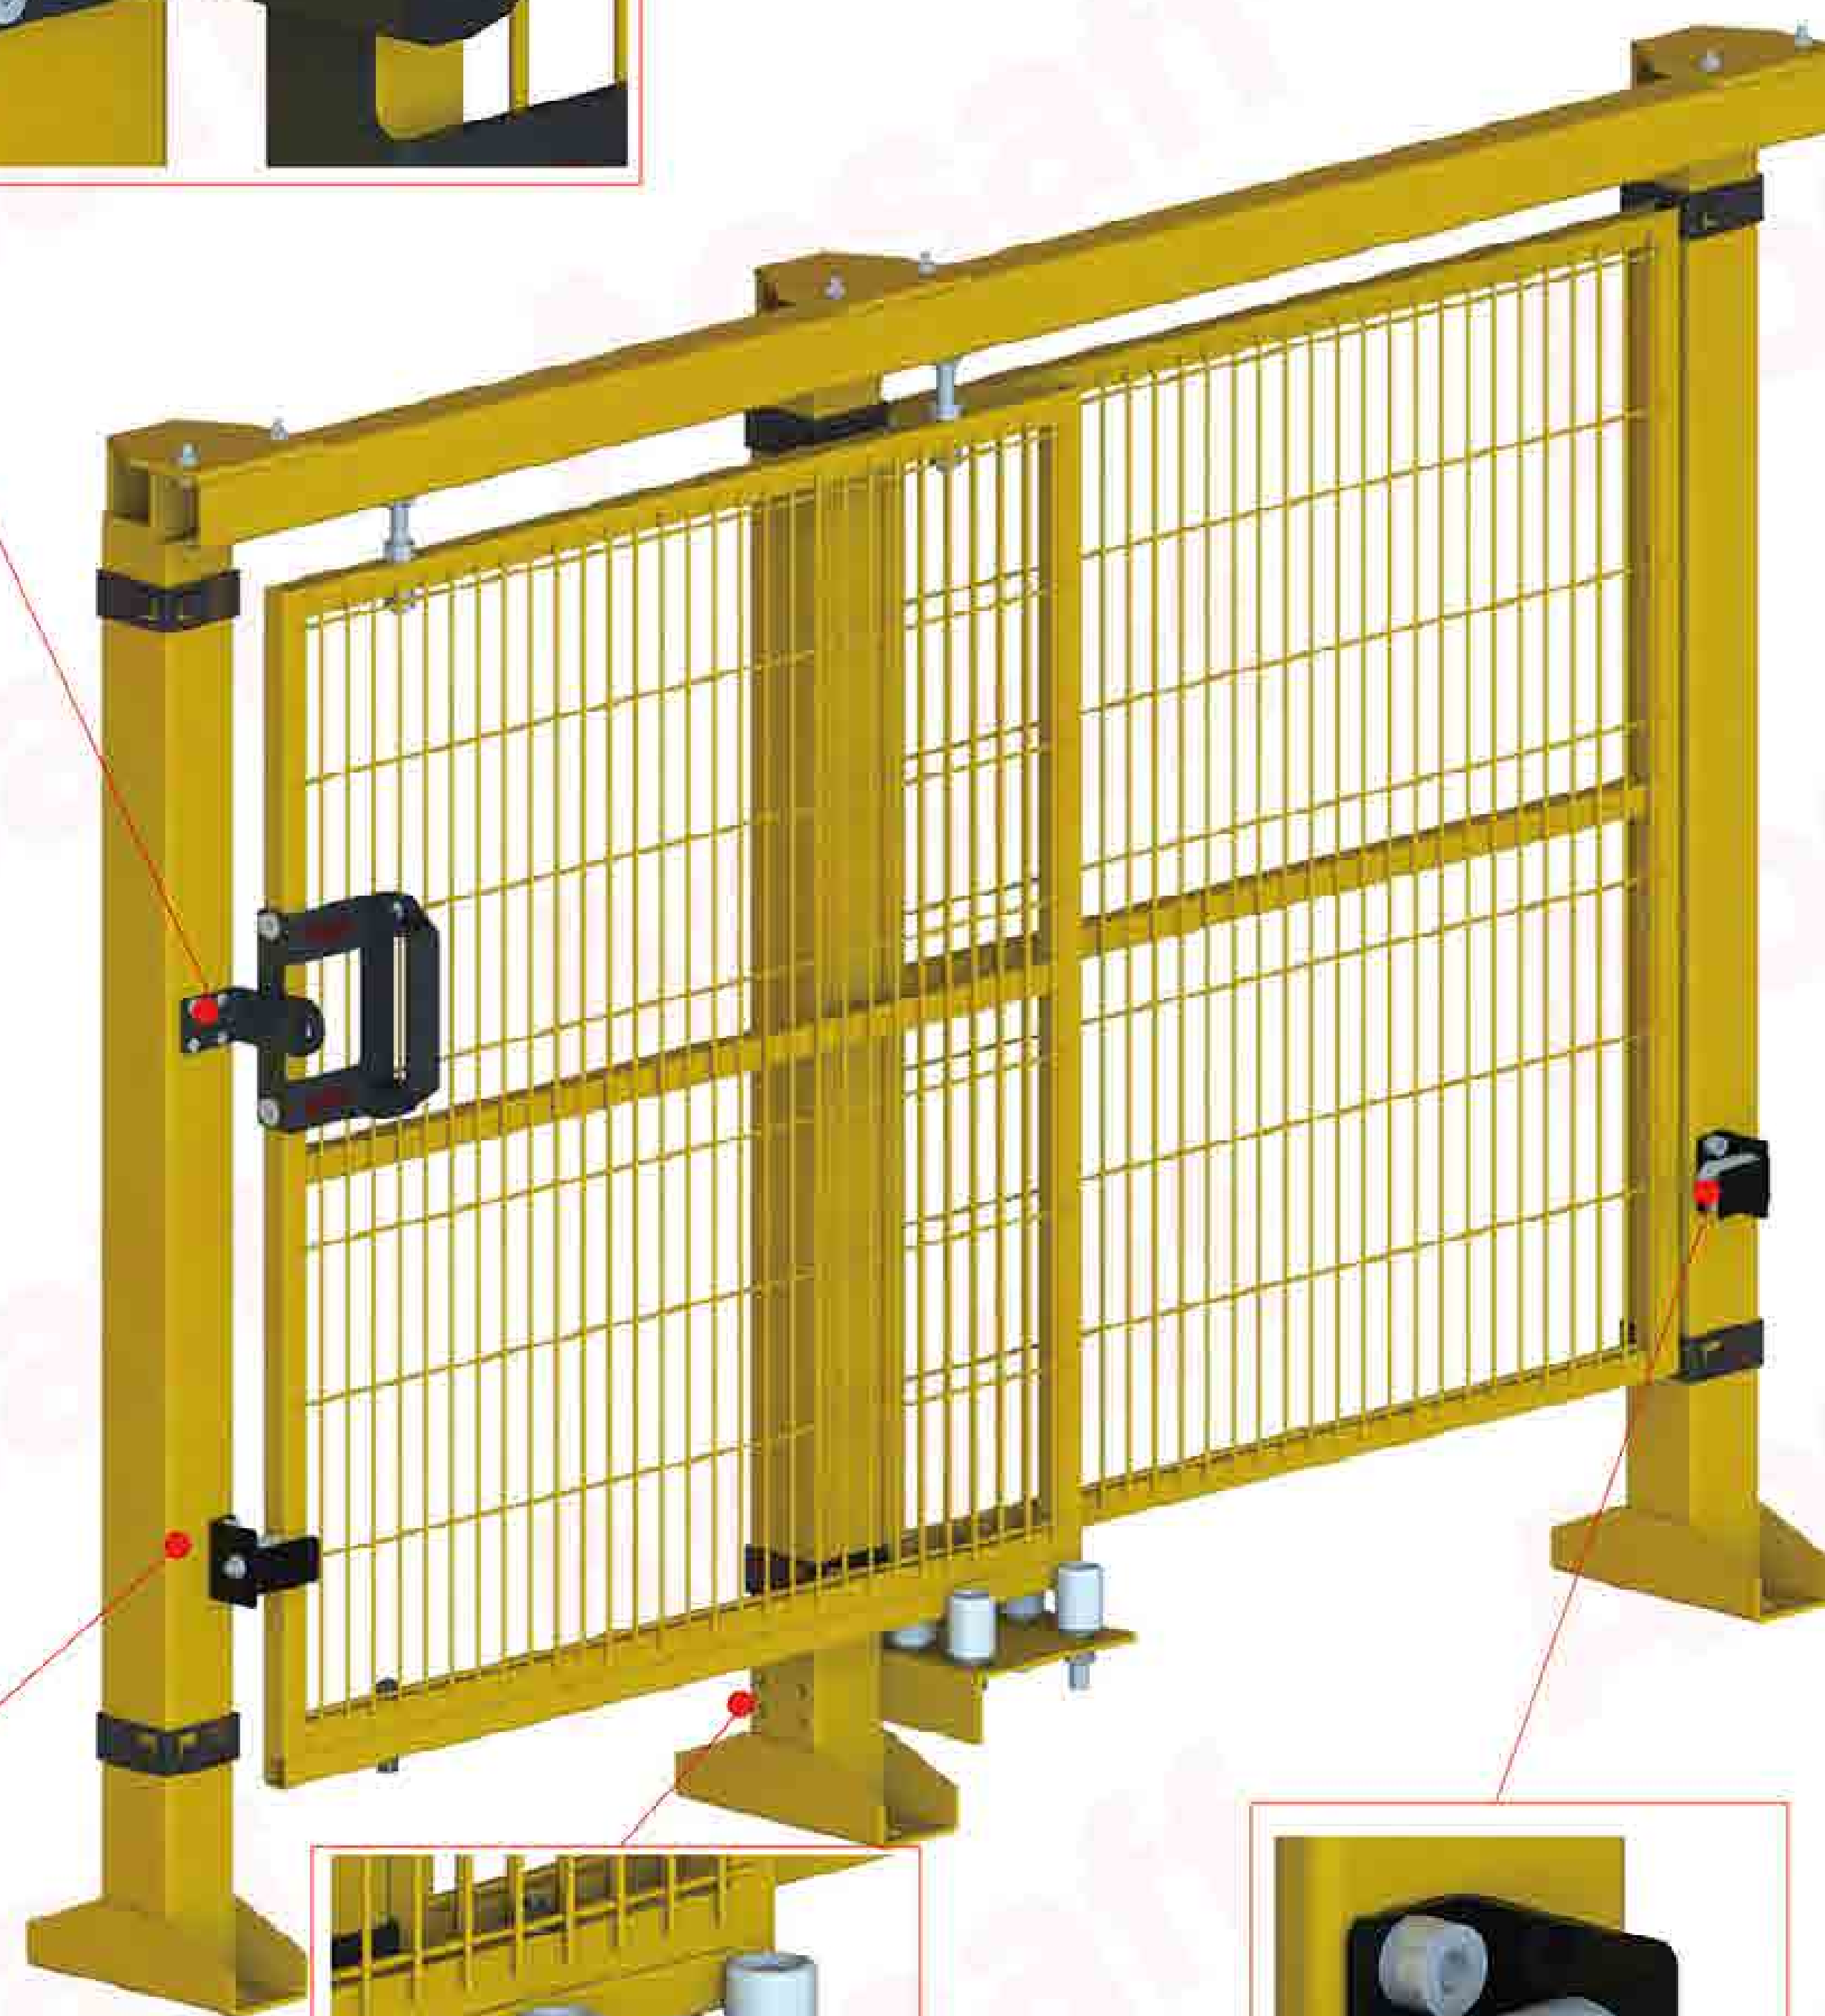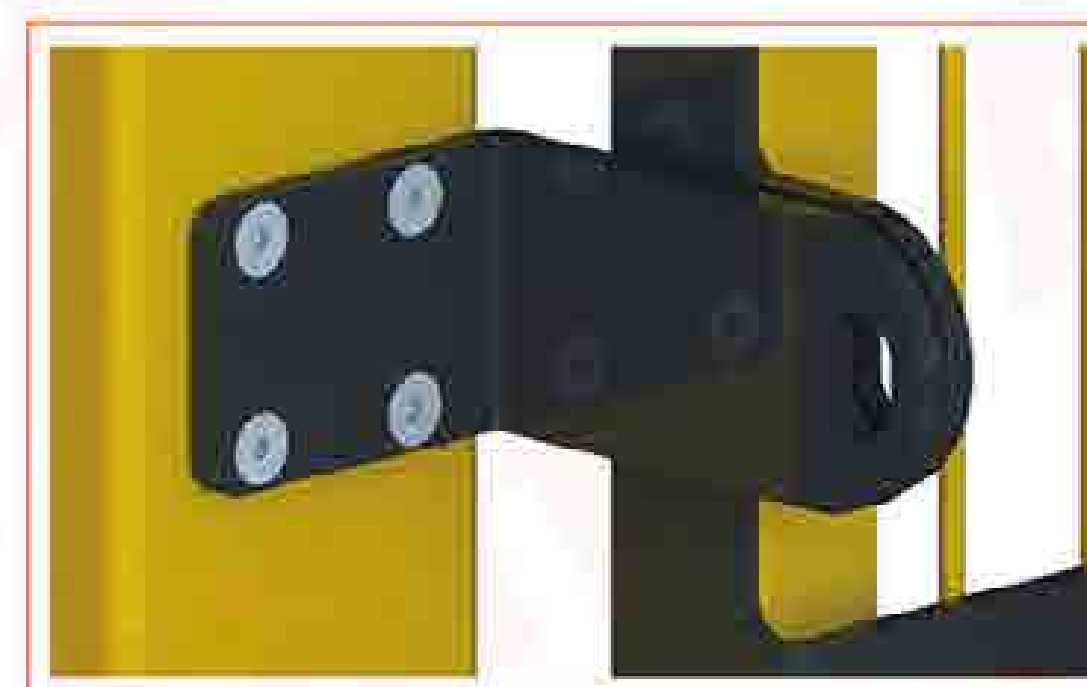

⑦

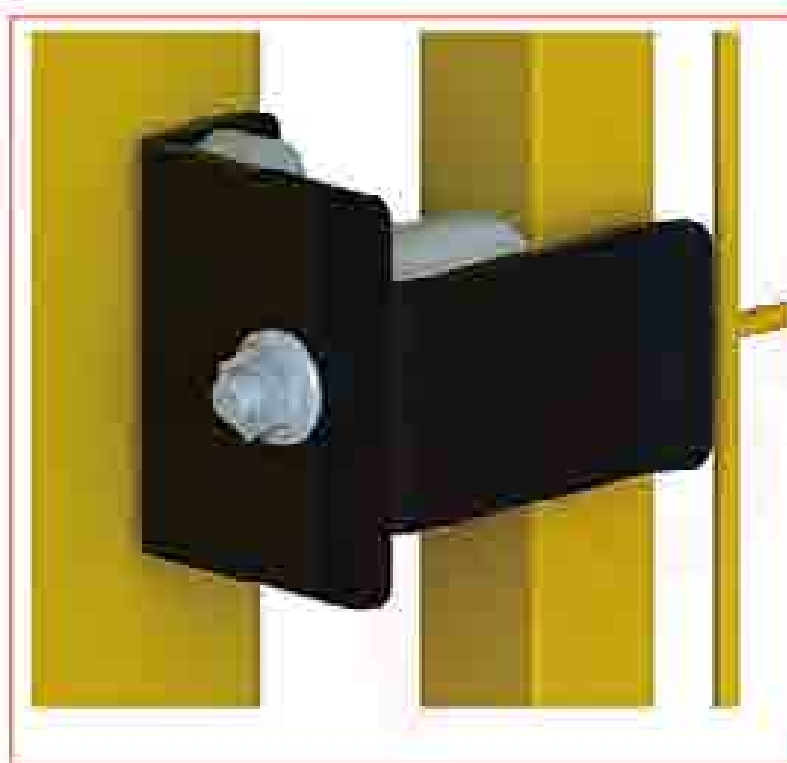



⑧



⑨



济南奥图自动化股份有限公司
JINAN AOTTO AUTOMATION CO.,LTD.

地 址: 济南市经济开发区华德路355号

电 话: 0531- 86521778 / 86521788

传 真: 0531- 86521797

邮 箱: aosaff@aotto.cn

官 网: www.aotto.cn

产品站: www.e-aotto.com

售后服务热线: 400- 618- 6177